

G-Sharp					
Part number	Part name.	Service level			
		1	2	3	
Front.					
7E33802001	Button with white line 16,5mmØ DR03101-C	x	x	x	
7E33802011	Button with white line 22,5mmØ DR03102-C	x	x	x	
7E33802041	Push button 6,5mmØ DR03103-C	x	x	x	
7E33802021	Console with printing DR03104-C		x	x	
Mainboard.					
7F80110500	PCBA, P20200, PENGUIN Mainboard		x	x	
7E48401201	256kX8 39VF020 M300 FLASH W/Program			x	
7E48100106	128kX8 HIGH SPEED SRAM SOJ32-400Mill			x	
7E49000101	XCB56362PV100 DSP QFP144-3			x	
7E49001401	ATMEGA8L-8AU TQFP32 PENGUIN			x	
7E12200201	10K RP11A11VB2 POTENTIOMETER 20%			x	
7E34001001	16Pos DigRot. Switch BTDS20HS-116-F15-1			x	
7E34001011	Push Switch JTP1239			x	
7E52200301	S4-BBB-PCC STEREO JACK CONNECTOR			x	
Chassis.					
7E33802051	Grip, Black DR03106-E	x	x	x	
Power supply					
7E50000111	Switching power supply - Pinquin		x		
Miscellaneous.					
7E60300201	Foam For Penguin product without Logo	x	x		