


Product	Description:	Service note no.
SCF Pedal	My SCF pedal makes a loud “pop” when being engaged and disengaged	Sno-T081

Reason for note:

My SCF pedal makes a loud “pop” when being engaged and disengaged. How can I solve that problem?

Actions:

I guess you are using external A/B switch box in which the outputs of the SCF are disconnected when the pedal is disengaged. In that situation the DC offset on the SCF outputs will tend to grow slowly (due to a minor DC-leak in the output capacitors) and as you engage the SCF you will get a pop. This artifact can easily be removed by mounting a 1Mohm resistor across the output jacks. Please refer to the drawing below.

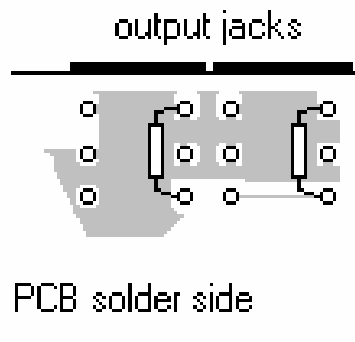

IMPORTANT:

This replacement should only be carried out by skilled technicians.