

Classic 450

Part list

| Part number | Part name. | Service level | | |
|----------------------------|--|---------------|---|---|
| | | 1 | 2 | 3 |
| Power Amp. | | | | |
| 7F82512001 | PCBA, P18401, 1038, RH 450, Power/Amp board | | x | x |
| 7E59001812 | DR09019-E, Isolation plate for 1038 Dirch Powerboard | | x | x |
| | | | | |
| Front Potmeterboard | | | | |
| 7F82514003 | PCBA 1112 P18503 Dirch Front Classic Potentiometer | | x | x |
| 7E12202101 | POTMETER ALPS:RK09L1120, Nut + washer supplied with potmeter | | | x |
| | | | | |
| Front Board | | | | |
| 7F82515003 | PCBA 1112 P18504 Dirch Front Classic AVR | | x | x |
| 7E34002611 | PUSH SWITCH | | | x |
| | | | | |
| Mainboard. | | | | |
| 7F82511011 | PCBA1112 Dirch Classic450 Mainboard | | x | x |
| 7E48403511 | 512kX8 39VF040 for Dirch FLASH W/Program | | | x |
| 7E49003611 | ATmega88 AVR QFP32/P08 (Dirch boot mainboard) | | | x |
| | | | | |
| Cables | | | | |
| 7E54702311 | Dirch classic 16 pol ribbon-cable for front PCB 2mm | | x | x |
| 7E54701312 | Ribbon cable 2x5 2.54mm | | x | x |
| | | | | |
| Chassis. | | | | |
| 7E58205313 | DR09004-F, Side cover for 1038 Dirch | x | x | x |
| | | | | |
| Miscellaneous. | | | | |
| 7E33806611 | DR09803-B, Plastic knob for Pots - 1112 Dirch | x | x | x |
| 7E33800501 | DR01113-1 Mute button | x | x | x |
| 7E57602711 | Rubber feet | x | x | x |
| 7E56307011 | BN5687, M5x8, Torx, Black for rubber foot | x | x | x |
| 7E59802111 | 50X50X15MM MAGLEV FAN | | x | x |
| 7E52204011 | Speakon jack-combo connector | | | x |
| 7E52204111 | IEC with 2-pole line switch connector | | | x |
| | | | | |
| Packing | | | | |
| 7E60302211 | Inner Foam for RebelHead (and Classic) giftbox | x | x | x |