

Corona Chorus + TriChorus+ Toneprint



Part number	Part name.	Service level		
		1	2	3
7E12202701	Potentiometer linear 9mm		X	X
7E12202801	Potentiometer Stereo Linear 9mm		X	X
7E34003811	Toggle switch 3 positions		X	X
7E34004111	Foot Switch Actuator, PB-4066C		X	X
7E34004211	TACT Switch Lead 12mm		X	X
7E49004811	DSPB56724AG DSP QFP144/P05			X
7E50500511	Relay, DPDT, latching, single coil			X
7E52300011	DC Power Connector			X
7E54602611	USB Cable, A plug to MINI B plug, 1,0m	X	X	X
7E56307211	DR06104-A, Captive Screw	X	X	X
7E57513311	DR10001-A Plastic Knob, Black		X	X
7E57603299	4 pcs Rubber Foot, 8 x T1.5 mm, Clear Silicone 80 shore	X	X	X
7E58209413	DR06108-C, Footswitch TOP nut		X	X