

Ditto X4 Looper



7E34003711 Erik Toggle switch 2 positions

7E57510713 DR06212-D, Plastic Knob, Black

7E12202701 Potentiometer linear 9mm

7E52300011 DC Power Connector

7E57510713
DR06212-D, Plastic Knob, Black

7E12203001
Potentiometer linear 10k 0,05W 20%

7E34005711
Toggle switch 3 positions momentary

7E34004111 Foot Switch Actuator, PB-4066C

7E58209413 DR06108-C, Footswitch TOP Nut.

7E34004211 TACT Switch Lead 12mm (PCB mounted)