

Flashback Triple Delay

Part number	Part name.	Service level		
		1	2	3
Main Board				
7F86011551	PCBA, P22350, Flashback Triple Delay, Main		X	X
7E34004111	Foot Switch Actuator, PB-4066C			X
7E34004211	TACT Switch Lead 12mm			X
7E50500511	Relay, DPDT, latching, single coil			X
7E52300011	DC Power Connector			X
7E34600101	6N137 DIP8 HIGH SPEED OPTOCUPLER			X
7E49103511	AK4621EFP-E2 Audio Codec SSOP30			X
UI Boards				
7F86012551	PCBA, P22351, Flashback Triple Delay, UI (4 individual boards)		X	X
7E12202701	Erik Potentiometer linear 9mm			X
7E12202901	Potentiometer linear 9mm w/11 Detents			X
7E34001001	16Pos DigRot. Switch BTDS20HS-116-F15-1			X
7E34003711	Erik Toggle switch 2 positions			X
7E34003811	Erik Toggle switch 3 positions			X
Wire harness				
7E54602911	Wire harness #1, FlashBack X4 (with 4 plugs)		X	X
7E54603011	Wire harness #2, FlashBack X4 (1 to 1)		X	X
Misc.				
7E58209413	DR06108-C, Footswitch TOP nut			X
7E57513411	DR10001-A, Plastic Knob, RAL 1013 (smaller ones)		X	X
7E57513811	DR06212-C, Plastic Knob, RAL1013 (big one)		X	X
7E56200211	Screw, M3x8,0mm WN1552 EJOT PT TYP D6		X	X
7E57605312	DR06217-B, flashback x4 Rubber Feet, Black	X	X	X
7E54602611	USB Cable, A plug to MINI B plug, 1,0m	X	X	X
Power supply.				
960899001	PSU base PowerPlug 9V	X	X	X
E52304011	Mains plug Australia for TC PowerPlug PSU	X	X	X