


# G-MAJOR 2

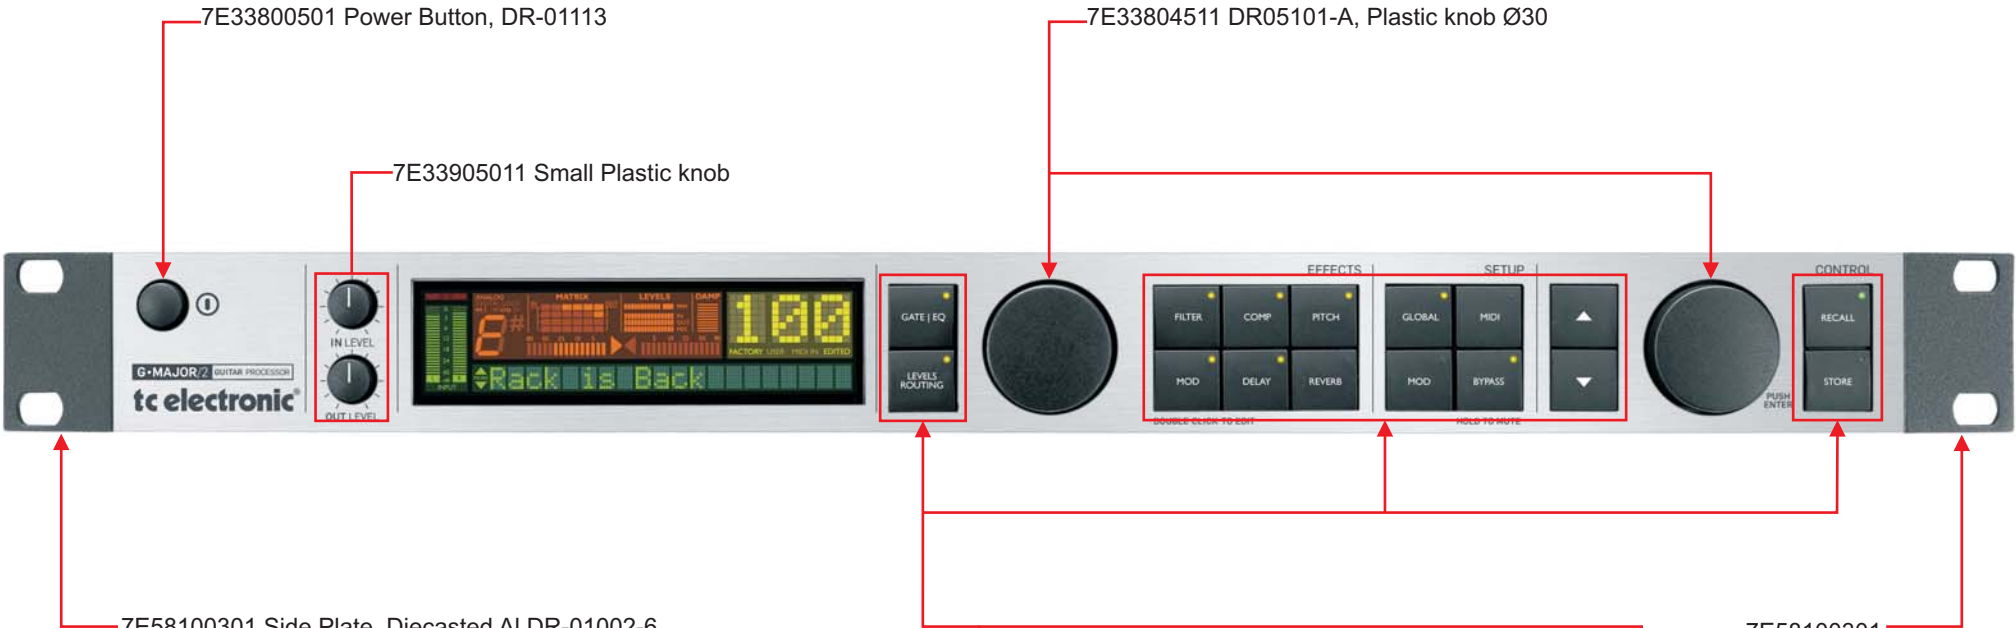

7E33800501 Power Button, DR-01113

7E33905011 Small Plastic knob

7E33804511 DR05101-A, Plastic knob Ø30

7E58100301 Side Plate, Diecasted Al DR-01002-6

7E58100301 Side Plate, Diecasted Al DR-01002-6

- 7E33800801 Inlet For Button With LED, DR-01108
- 7E33901902 "FILTER", Cap For Button With LED
- 7E33902502 "BYPASS", Cap For Button With LED
- 7E33902802 "COMP", Cap For Button With LED
- 7E33901202 ">", Cap For Button Without LED
- 7E33903102 "PITCH", Cap For Button With LED
- 7E33903202 "DELAY", Cap For Button With LED
- 7E33903302 "REVERB", Cap For Button With LED
- 7E33903802 "MOD", Cap For Button With LED
- 7E33901101 "RECALL", Cap For Button With LED
- 7E33900902 "STORE", Cap For Button With LED
- 7E33904322 GATE|EQ , Cap For Button With LED
- 7E33904312 LEVEL ROUTING , Cap For Button With LED
- 7E33904292 GLOBAL , Cap For Button With LED
- 7E33904282 MIDI , Cap For Button With LED