

Part number	Part name.	Service level		
		1	2	3
7E34003811	Toggle switch 3 positions		X	X
7E34004211	TACT Switch Lead 12mm			X
7E34006011	Foot Switch Actuator, SF12030F-029			X
7E50500511	Relay, DPDT, latching, single coil			X
7E52300011	DC Power Connector			X
7E56200211	Screw, M3x8,0mm WN1552 EJOT PT TYP D6			X
7E57513311	DR10001-A Plastic Knob, Black	X	X	X
7E57605213	DR06222-C Rubber bottom Black Polytune Noir	X	X	X
7E58209413	DR06108-C, Footswitch TOP nut	X	X	X