

Konnekt Live				
TC order no:	Part name.	Service level		
		1	2	3
Front.				
7E33805611	Knob Ø17mm for Konnekt-Live	x	x	x
7E33805711	DR05521-A, Switch knob Ø6mm for K-Stage	x	x	x
7E33805811	DR05522-A, Knob Ø14mm for K-Stage	x	x	x
7E52202211	Combo connector jack/XLR NCJ10FI-H-0			x
7E52202411	S1/SHL/BBBX2 Stereo Stack Jack PCB (Line in/Line out)			x
7E52202311	S1/S/BBBX2 Stereo Stack Jack PCB (Phones)			x
7E34002011	ED1611S-24-24LC-20F Encoder			x
7E12200912	R11A11VB2C102-1KF-252 1K0 Potmeter (Gain/Trim)			x
7E34001711	Push button switch (phan/line in)			x
7E34001811	Push button switch (ch.select/dsp select)			x
7E34001911	Push button switch (pad\inst)			x
Mainboard.				
7E49001911	tsb41ab2 1394a-2000 2-Port PHY (firewire controller)			x
7E52300011	DC Power Connector			x
7E47100201	INA163 Burr Brown Mic-preamp V SO14			x
7E25305001	12pF 50V 5% 0805 COG CHIP CAP.			x
7E33001011	XTAL 24.5760 MHz, 12Pf, 30PPM, HC49			x
7F81731002	PCBA, P19501, Konnekt 24D Fireing v/AAC			x
7E25310211	Cap; COG; 15p; 50V; 5%; 0805; SMD; Ceramic Chip Capacitor			x
7E39301011	2A Slow-Blow Fuse 63V-AC/DC 1206		x	x
Miscellaneous.				
500101411	SwitchingPowerAdapter-Konnekt	x	x	x