

Part number	Part name.	Service level		
		1	2	3
<b>Front.</b>				
748040011	Service Digital Konnekt x32 Front		x	x
7E34000501	TACT switch W/ LED green JTP1240G			x
122800011	RK09K113(10Kb) Potentiometer			x
7E33800501	Power Button, DR01113	x	x	x
7E57505911	Light guide for EIO2 power switch, DR03095-A	x	x	x
7E33801401	DR01115-C, Inner Button 4X4 - Clear	x	x	x
7E33801501	DR01116-A, Cap for Button 4X4	x	x	x
7E33800901	Encoder Knob Ø10, DR01103-1	x	x	x
<b>Mainboard.</b>				
748044011	Service Digital Konnekt x32 Main (Discontinued)		x	x
7E25102611	15p 50V 5% COG 0603 smd Ceramic capacitor			x
7E33001011	XTAL 24.5760 MHz, 12Pf, 30PPM, HC49			x
7E49001911	tsb41ab2 1394a-2000 2-Port PHY			x
522001511	3 Pol XLR Female for PCB NC3FB-H2E			x
7E52202411	S1/SHL/BBBX2 Stereo Stack Jack PCB			x
7E52201901	Single Jack Cliff - FCR111505W, S1C/BBB			x
<b>Option board</b>				
748041011	Service Digital Konnekt x32 OptinSub (Not available any more)		x	x
748042011	Service Digital Konnekt x32 MainSub (Not available any more)		x	x
<b>Power supply</b>				
7E50000311	Switching Power Supply Unit - G-FLAT		x	x

Flash for mainboard is not available. If the flash is defective, please return to TC for repair