

Part number	Part name.	Service level		
		1	2	3
7E12202701	Erik Potentiometer linear 9mm		X	X
7E12203001	Potentiometer linear 10k 0,05W 20%		X	X
7E34003811	Toggle switch 3 positions		X	X
7E34004111	Foot Switch Actuator, PB-4066C			X
7E34004211	TACT Switch Lead 12mm			X
7E50500511	Relay, DPDT, latching, single coil			X
7E52300011	DC Power Connector			X
7E54602611	VoiceTone/Erik USB Cable, A plug to MINI B plug, 1,0m	X	X	X
7E56307211	DR06104-A, Captive Screw	X	X	X
7E57508911	Erik DR06115-A, Pot-knob- RAL1013	X	X	X
7E57603299	4 stk Rubber Foot, 8mm x T1.5mm, Clear Silicone 80 shore	X	X	X
7E58209413	DR06108-C, Footswitch TOP nut	X	X	X