

| Part number | Part name. | Service level | | |
|-------------------------|---|---------------|---|---|
| | | 1 | 2 | 3 |
| Main / Amp board | | | | |
| 7F85811010 | PCBA, P22637, SingThing, Main/AMP board | | x | x |
| 7E38000911 | Crystal low profile 5x3,2SMD - Abracon ABM3B | | | x |
| 7E49004111 | DSPB56720AG DSP QFP144/P05 | | | x |
| 7E49103311 | AK5357ETP-E2 - Advanced Multi-Bit Delta-Sigma ADC | | | x |
| 7E52203111 | 3 Pol XLR Male for PCB JY-5032A | | | x |
| UI board | | | | |
| 7F85812010 | PCBA, P22681, SingThing, UI Board | | x | x |
| 7E12200101 | RK09K113(10Kb) POTENTIOMETER 20% | | | x |
| 7E34006811 | Low Profile Rotary Encoder Pushbutton | | | x |
| Daughter board | | | | |
| 7F85813010 | PCBA, P22696, SingThing, Daughter Board | | x | x |
| 7E34001021 | Pushbutton switch WPS-2FL-B | | | x |
| Drivers | | | | |
| 7E61602212 | 6,5" ICT driver, 1175 DASH-8, SDS-160F25PR01-04 | | x | x |
| Power Supply | | | | |
| 7E50002111 | SMPS Adapter base PowerPlug42.5 | x | x | x |
| Miscellaneous | | | | |
| 7E33601101 | LCD 128X64 BLUE NEGATIVE COG | | | x |
| 7E54602611 | VoiceTone/Erik USB Cable, A plug to MINI B plug, 1,0m | x | x | x |
| 7E57504111 | DR05113-B, Overmoulded knob for HANS | x | x | x |
| 7E57505011 | DR05124-D, Overmoulded knob for AC/EC UI | x | x | x |
| 7E57508711 | Switch Cap for PT series Switch, 1140 Q400 | x | x | x |
| 7E57512013 | DR05084-D Lower-Hook VoiceSolo FX150 | | x | x |
| 7E57512112 | DR05086-C Upper-Hook VoiceSolo FX150 | | x | x |
| 7E57512312 | Voicesolo FX150 DR05090-C Mic Stand Support | | x | x |
| 7E57516714 | DR11017-C, SingThing, Keypad, S11020-B | | x | x |
| E54700102 | EX11342-A, Power Cord, EU, 180 cm | x | x | x |