

Spark Booster Mini

tc electronic

Part number	Part name.	Service level		
		1	2	3
7E58209413	DR06108-C, Footswitch TOP nut		X	X
7E34004111	Foot Switch Actuator, PB-4066C			X
7E34004211	TACT Switch Lead 12mm			X
7E57508911	Erik DR06115-A, Pot-knob- RAL1013		X	X
7E50500511	Relay, DPDT, latching, single coil			X
7E52300011	DC Power Connector			X
7E57605213	DR06222-C Rubber bottom Black Polytune Noir	X	X	X
7E57605299	10 pcs DR06222 Rubber bottom for the mini serie	X	X	X
7E56200211	Screw, M3x8,0mm WN1552 EJOT PT TYP D6		X	X