

TC1128 MIDI CC# List (preliminary) EPROM v. 1.23

CC#

0	Band 1 32Hz
1	Band 2 40Hz
2	Band 3 50Hz
3	Band 4 63Hz
4	Band 5 80Hz
5	Band 6 100Hz
6	Band 7 125Hz
7	Band 8 160Hz
8	Band 9 200Hz
9	Band 10 250Hz
10	Band 11 320Hz
11	Band 12 400Hz
12	Band 13 500Hz
13	Band 14 630Hz
14	Band 15 800Hz
15	Band 16 1kHz
16	Band 17 1.25kHz
17	Band 18 1.6kHz
18	Band 19 2kHz
19	Band 20 2.5kHz
20	Band 21 3.2kHz
21	Band 22 4kHz
22	Band 23 5kHz
23	Band 24 6.3kHz
24	Band 25 8kHz
25	Band 26 10kHz
26	Band 27 12.5kHz
27	Band 28 16kHz
28	Out Level
29	
30	Input Gain
31	Low Cut
32	Hi Cut
33	EQ ON