

Spare parts for Dreamscape

Part number	Part name.	Service level		
		1	2	3
7E56602699 *	Footswitch with metal space nut		X	X
7E34004111 **	Foot Switch Actuator, PB-4066C		X	X
7E34004211 **	TACT Switch Lead 12mm		X	X
7E56602699	Footswitch with metal space nut		X	X
7E58210611	Aluminum knob for 6mm shaft	X	X	X
7E34003811	Toggle switch 3 positions		X	X
7E12203001	Potentiometer linear 10k 0,05W 20%		X	X
7E12202701	Potentiometer linear 9mm		X	X
7E12202801	Potentiometer Stereo Linear 9mm		X	X
7E52300011	DC Power Connector			X
7E58209413	DR06108-C, Footswitch TOP Nut.	X	X	X
7E54301311 ***	Flexstrip Cable FSN12A7			X
7E54301511 ***	Flexstrip Cable FSN12A11			X
7E54602611	VoiceTone/Erik USB Cable, A plug to MINI B plug, 1,0m	X	X	X
7E57603299	4 pcs Rubber Foot, 8 x T1.5 mm, Clear Silicone 80 shore	X	X	X
7E56307211	DR06104-A, Captive Screw	X	X	X

*: This PCB mounted footswitch is used for The Dreamscape with serial no 11936999 and lower

** : The PCB mounted tact switch and actuator is used for The Dreamscape with serial no 17065200 and higher

***: These cables are only used for The Dreamscape with serial no 11936999 and lower