

| Part number | Part name. | Service level | | |
|--------------------------|---|---------------|---|---|
| | | 1 | 2 | 3 |
| Analog I/O | | | | |
| 7F85614001 | PCBA, P22631, 1089 - VoiceLive 2 Analog IO | | X | X |
| 7E49100713 | AK4620BVF 24bit 192Khz Codec - VSOP | | | X |
| 7E49102111 | AK5359ETP 24bit 192Khz ADC - TSSOP-16 | | | X |
| 7E52200401 | XLR NC3FA-H-2 - Female | | | X |
| 7E52202001 | Dual Jack Cliff - FCR1124N | | | X |
| 7E52203111 | 3 Pol XLR Male for PCB JY-5032A | | | X |
| 7E52203611 | 6,3mm_1/4" Stereo Jack, Right Angle, PCB Mount | | | X |
| 7E52204611 | STEREO JACK PCB MOUNT/3.5MM | | | X |
| 7E39301011 | 2A Slow-Blow Fuse 63V-AC/DC 1206 | | X | X |
| 7E35100501 | FDC658P Mosfet Transistor | | | X |
| 7E34001021 | Pushbutton switch WPS-2FL-B | | | X |
| UI | | | | |
| 7F85612001 | PCBA, P22660, 1089 - VoiceLive 2 UI | | X | X |
| 7E33601001 | LCD Display 192X64 BLUE NEGATIVE | | X | X |
| 7E34000401 | JTP1240R TACT switch w/ LED Red | | | X |
| 7E34001611 | PEC12-4220F-N0024 ENCODER | | | X |
| 7E49004611 | ATmega88 AVR QFP32/P08 (VoiceLive 2 Program I) | | | X |
| 7E34001611 | PEC12-4220F-N0024 ENCODER | | | X |
| Digital I/O | | | | |
| 7F85611001 | PCBA, P22617, 1089 - VoiceLive 2 Digital IO | | X | X |
| 7E48404311 | 4M x 8 flash, VoiceLive 2 | | | X |
| 7E49004111 | DSPB56720AG DSP QFP144/P05 | | | X |
| 7E49102911 | TAS1020B USB DRIVER TQFP-48 | | | X |
| Foot switch board | | | | |
| 7F85613001 | PCBA, P22661, 1089 - VoiceLive 2 Foot_SW | | X | X |
| 7E34006111 | Foot Switch, R13-85A-05-H for VL2 and VL3 | | | X |
| Miscellaneous. | | | | |
| 7E57507011 | DR05234-A, overmoulded LowProfile knob | X | X | X |
| 7E57505411 | DR05130-C, Footswitch Lightguide Ring for AC/EC | X | X | X |
| 7E57505711 | DR05131-B, Footswitch Nut AC/EC Front | X | X | X |
| 7E58207399 | DR05147-D 10 pack VoiceLive 2, FootSwitch Collar, Black | X | X | X |
| 7E57504211 | DR05114-C, Switchcap for HANS | X | X | X |
| 7E57504311 | DR05115-B, Switch Lightpipe for HANS | X | X | X |
| 7E57506613 | DR05139-C, Switch Cap Guide for HANS | | | |
| 7E33804511 | DR05101-A, Plastic knob Ø30 VoiceLIVE | X | X | X |
| 7E57506818 | DR05142-D, VoiceLive 2 LENS, Silkscreen S05142H01 | | X | X |
| 7E57507111 | KB-R02AD-PA, Switch Cap forPT series Switch | X | X | X |
| 7E58207014 | VoiceLive 2 DR05143-D, LH ENDCAP | | X | X |
| 7E58207114 | VoiceLive 2 DR05144-D, RH ENDCAP | | X | X |
| 7E54701412 | DR05036-B Display Cable, 1089 Nares | | | X |
| 7E54701512 | DR05037-B Footswitch A Cable, 1089 Nares | | | X |
| 7E54701612 | DR05038-B Footswitch B Cable, 1089 Nares | | | X |
| 7E54701712 | DR05039-B Control Board to DSP Cable, 1089 Nares | | | X |
| 7E54701812 | DR05040-B DSP to Analog Board Cable, 1089 Nares | | | X |
| 7E54602111 | USB 2.0 cable VL2 | X | X | X |
| 547003012 | Cable EU Europe Black 3x0.75mm H05VV-F 180 cm | X | X | X |
| 547007012 | Cable Australia 3x0.75mm 250 cm | X | X | X |
| 7E58207213 | DR05146-C, VoiceLive 2 HANDLE | X | X | X |
| 7E34003111 | PT-S3PL-2 POWER SWITCH | X | X | X |
| 7E57602512 | DR05145-B, VoiceLive 2 Rubber Foot | X | X | X |
| Power supply. | | | | |
| 960899002 | PowerPlug 12V | X | X | X |
| E52304011 | Mains plug Australia for Honor PSU Level VI | X | X | X |