



# TC·HELICON®

<b>Company</b>	<b>TC-Helicon Vocal Technologies Inc.</b>
<b>Document</b>	<b>VoiceLive 3 Maintenance Mode</b>
<b>Version</b>	<b>1.0</b>
<b>Created</b>	<b>Oct. 30, 2013</b>
<b>Created by</b>	<b>RE</b>
<b>Products Supported</b>	<b>VoiceLive 3</b>
<b>Notes</b>	<b>This document outlines how to access the maintenance mode for the VoiceLive 3 device.</b>

## Revisions

<b>Rev.</b>	<b>Description</b>	<b>Date</b>
1.0	Initial Release	Oct. 30, 2013


1. Locate the headphone jack on the back of the VoiceLive 3 device.



2. Find something small and thin that will fit inside the headphone jack. A jeweler's screwdriver works well, a paperclip may be too thin and won't work as well.



3. There is a switch inside the headphone jack that needs to be pushed in at the same time the power switch is engaged. Push the screwdriver into the headphone jack until you can feel the switch push in and out. If you are having trouble finding the switch, try angling the screwdriver slightly so it is higher inside than outside.

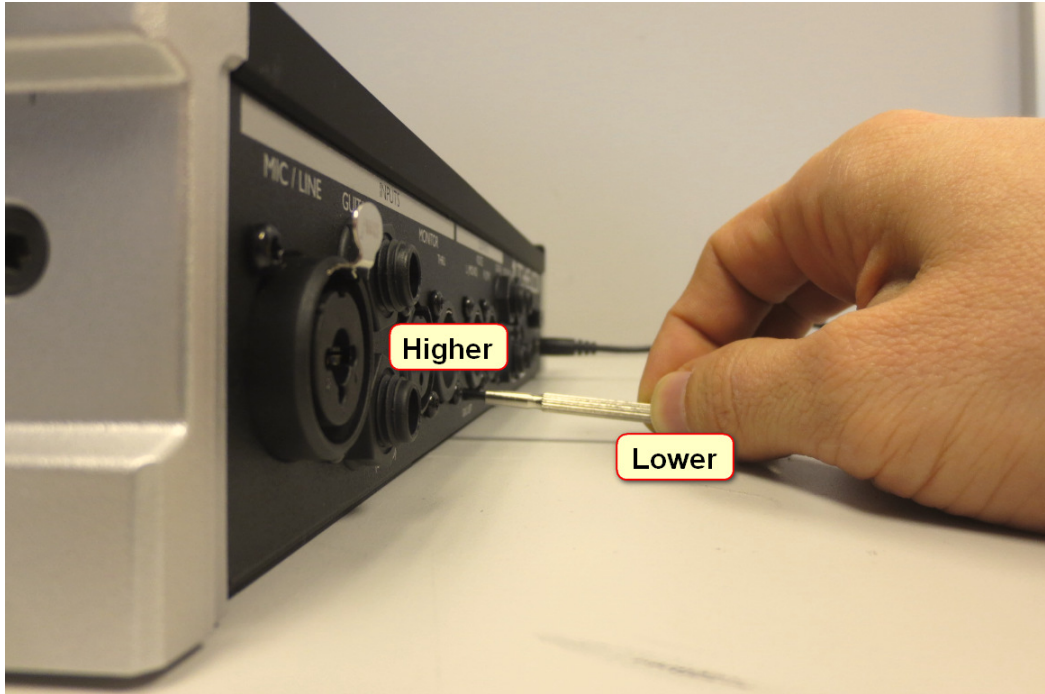

4. Once the switch has been located, push it in while powering up the VoiceLive 3. If you see the below screen then you have successfully reached the maintenance mode.

