

Part number	Part name.	Service level		
		1	2	3
Analog I/O				
7F85611011	PCBA, P22625, 1261, Bylot, Main/Analog board		X	X
7E34001021	Pushbutton switch WPS-2FL-B		X	X
7E34003111	PT-S3PL-2 POWER SWITCH		X	X
7E35100501	FDC658P Mosfet Transistor			X
7E38002911	Crystal SMD Low-Profile ESR<30R HC49US CL=12pF			X
7E25102211	10p Cap 50V 5% 0603 COG			X
7E39301011	2A Slow-Blow Fuse 63V-AC/DC 1206		X	X
7E43401212	Voice Live3 Extreme Micro-SD Card 16GB Flash	X	X	X
7E49004111	DSPB56720AG DSP QFP144/P05			X
7E49100711	AK4620A-AVFP 24bit 192Khz Codec - VSOP			X
7E49103311	AK5357ETP-E2 - Advanced Multi-Bit Delta-Sigma ADC			X
7E52203111	3 Pol XLR Male for PCB JY-5032A		X	X
7E52203211	3 Pol XLR Female for PCB JY-5033A		X	X
7E52300011	DC Power Connector		X	X
7E52205111	6,3mm_1/4" Stacked Dual Stereo Jack			X
UI				
7F85612097	UI Assembly VoiceLive 3 Extreme			X
7E49009011	VoiceLive 3 ATMEGA88A-AU Microcontroller UI/Control			X
Control				
7F85614004	Service VoiceLive 3 PCBA, P22672 Control Board		X	X
7E34000801	ENC/EC12E24244F20. Main encoder with push switch		X	X
7E34001611	PEC12-4220F-N0024 ENCODER		X	X
7E49009011	VoiceLive 3 ATMEGA88A-AU Microcontroller UI/Control			X
7E59803111	Microphone 9.7 x 6.5mm		X	X
Foot switch board				
7F85613099	Voicelive 3 PCBA P22674 Foot-SW with footswitch board		X	X
Miscellaneous.				
7E33601001	LCD Display 192X64 BLUE NEGATIVE ***			X
7E34006111	Foot Switch, R13-85A-05-H for VL2 and VL3		X	X
7E57505411	DR05130-C, Footswitch Lightguide Ring for AC/EC	X	X	X
7E57505711	DR05131-B, Footswitch Nut AC/EC Front	X	X	X
7E57506613	DR05139-C, Switch Cap Guide for HANS	X	X	X
7E57507011	DR05234-A, overmoulded LowProfile knob	X	X	X
7E57507111	KB-R02AD-PA , Switch Cap forPT series Switch	X	X	X
7E57509414	DR05178-E, VoiceLive 2 Rack Knob ovrmltd	X	X	X
7E58207314	DR05147-D, VoiceLive 2, FootSwitch Collar, Black		X	X
7E58207399	DR05147-D 10 pack VoiceLive 2, FootSwitch Collar, Black		X	X
7E58207014	VoiceLive 2 DR05143-D, LH ENDCAP		X	X
7E58207114	VoiceLive 2 DR05144-D, RH ENDCAP		X	X
7E57602512	DR05145-B, VoiceLive 2 Rubber Foot	X	X	X
7E58207213	DR05146-C, VoiceLive 2 HANDLE		X	X
7E54706211	DR05195-A, Display Cable for VoiceLive 3 ***			X
7E59805011	DR05108-A, Main Flat Cable for VoiceLive 3			X
7E54602611	VoiceTone/Erik USB Cable, A plug to MINI B plug, 1,0m	X	X	X
7E56301611	M3x8 Hexalobular Black - (BN15857)			
Power supply				
960899002	PSU base PowerPlug12V/1A Level VI	X	X	X
E52304011	Mains plug Australia for Honor PSU Level VI	X	X	X

If purchasing a display it is recommended to purchase a cable as well as it is difficult to unsolder the cable from the old display