


# Play Electric

7E57508612  
DR05163-B, Flush knob Q400, SR05163-A01

7E33601101 LCD 128X64 BLUE NEGATIVE COG

7E57510414 Lens

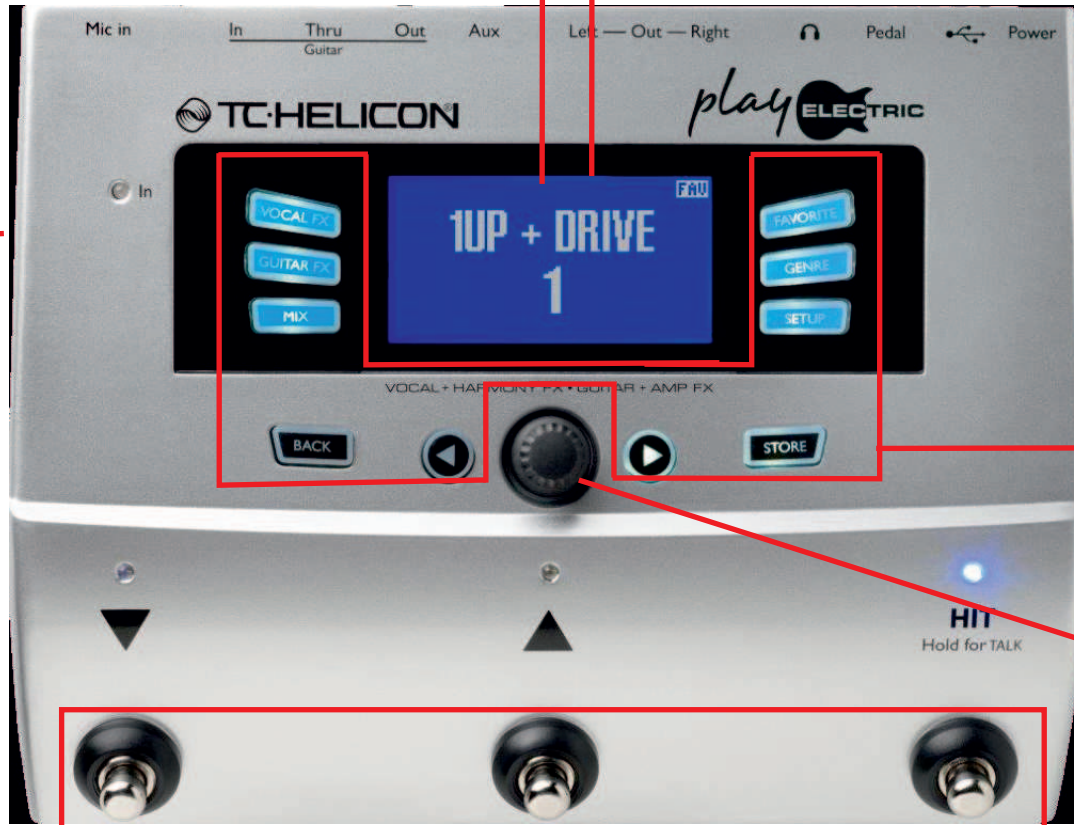

7E57513611  
DR05189-C Play Acoustic, KeyPad, S05189-A02

7E57505011  
DR05124-D, Overmoulded knob for AC/EC UI

7E34001411 (7E34001499 for a 10 pcs package)  
R13-85 Switch

7E57504611  
DR05117-C, Footswitch collar for Hans for Service

# Play Electric



7E52300011  
DC Power Connector

7E52203111  
3 Pol XLR Male for PCB JY-5032A

7E52203611  
6,3mm\_1/4" Stereo Jack, Right Angle, PCB Mount

7E52203211  
3 Pol XLR Female for PCB JY-5033A