

Part number	Part name.	Service level		
		1	2	3
Mainboard				
7F84011211	PCBA, P22629, Mainboard		X	X
7E48408212	2M x 8 flash, Play Electric			X
7E49006711	AT32UC3B0128-A2UT Microcontrolle (AVR,)			X
7E49103311	AK5357ETP-E2 - Advanced Multi-Bit Delta-Sigma ADC			X
7E49103511	AK4621EFP-E2 Audio Codec SSOP30			X
7E52602011	PCB socket HDR 2mm 2X2 Socket			X
7E52203111	3 Pol XLR Male for PCB JY-5032A			X
7E52203211	3 Pol XLR Female for PCB JY-5033A			X
7E52203611	6,3mm_1/4" Stereo Jack, Right Angle, PCB Mount			X
7E52300011	DC Power Connector			X
7E34001021	Pushbutton switch WPS-2FL-B			X
7E39301111	1A Slo-Blo Fuse 63V-AC/DC 1206			X
7E22000701	100uF 20% 63v ELEC.CAP. PCAPR200-400			X
7E12203601	9mm, Horizontal, 15mm shaft 100mm height			X
7E38000911	Crystal low profile 5x3,2SMD - Abracon ABM3B			X
UI				
7F84012012	PCBA, P22671, UI board		X	X
7E34001611	PEC12-4220F-N0024 ENCODER			X
Miscellaneous.				
7E33601101	LCD 128X64 BLUE NEGATIVE COG			X
7E57510414	DR05188-B, 1150, Lerdorf, Lens, Silkscreen S05188-D01			X
7E57605012	Rubber Foot, 12.3mm x T2.0 mm, Clear Silicone 80 shore A	X	X	X
7E34001411	R13-85 Switch			X
7E34001499	R13-85 Switch, 10 pcs. package			X
7E57504611	DR05117-C, Footswitch collar for Hans for Service		X	X
7E57505011	DR05124-D, Overmoulded knob for AC/EC UI		X	X
7E57508612	VoiceTone DR05163-B, Flush knob Q400, SR05163-A01		X	X
7E57506613	DR05139-C, Switch Cap Guide for HANS			X
7E57513611	DR05189-C, 1299, Play Acoustic, KeyPad, S05189-A02		X	X
7E54602611	USB Cable, A plug to MINI B plug, 1,0m	X	X	X
Power supply.				
960899002	PowerPlug 12V	X	X	X
E52304011	Mains plug Australia for Honor PSU Level VI	X	X	X