

VoicePrism Plus Noise Solution


Problem Description:

VoicePrism Plus has substantially noisier output when the VoiceCraft Card is connected to the back panel than when it is disconnected.


Solution:

Connect MTH2 to ground.


1. Open top cover of VoicePrism Plus.
2. Locate MTH2 mounting hole near the front of the unit on the side of the power supply. (see bottom right hand corner of picture below)

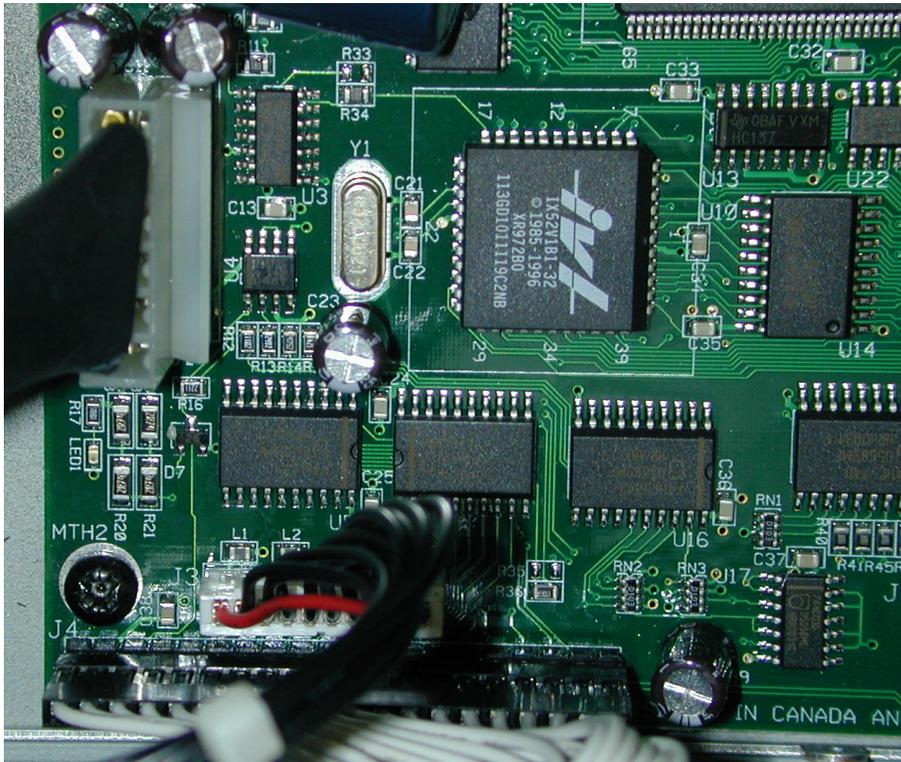

3. Remove machine screw from MTH2 as shown below

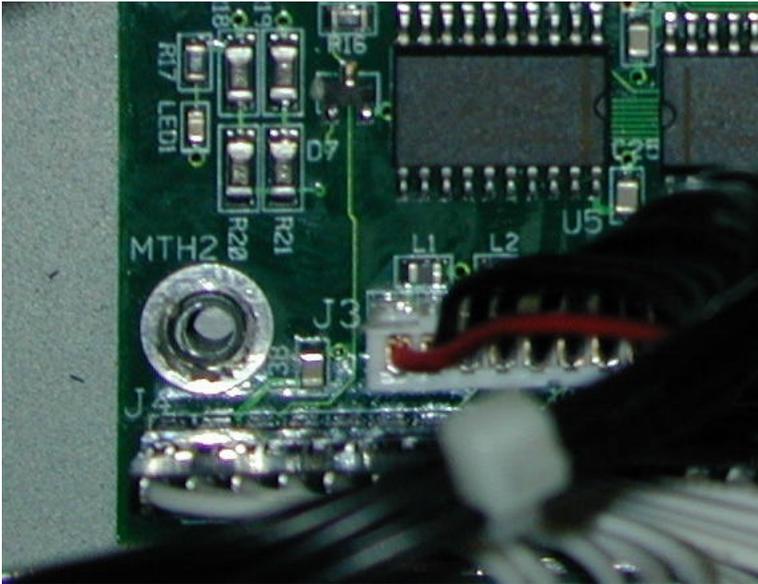

4. Solder a wire from the top of C38 to the edge of MTH2 pad as shown below

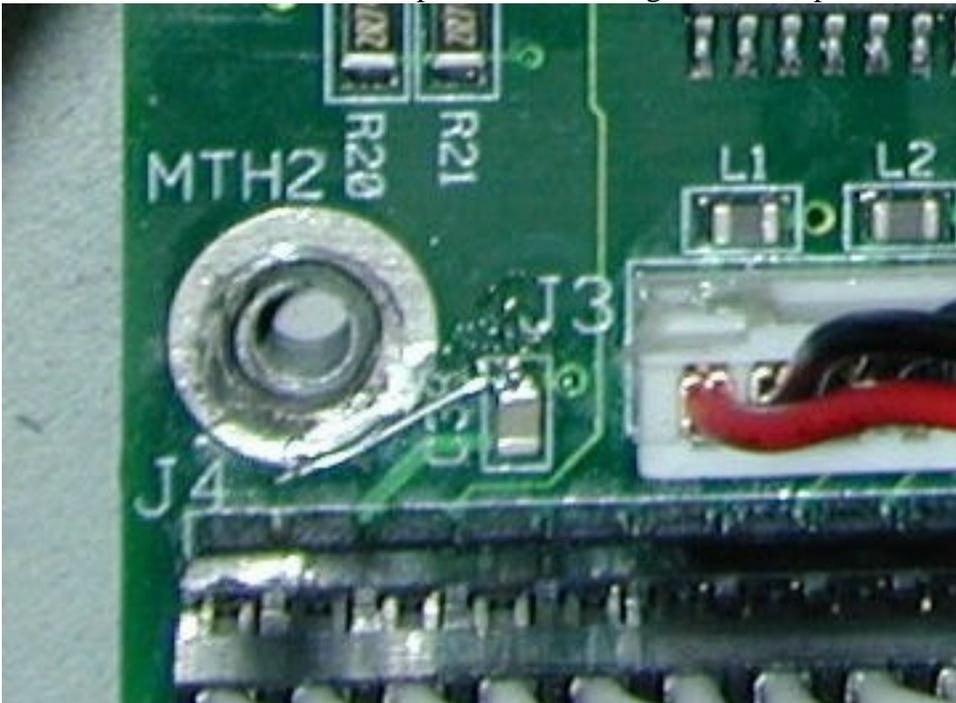

5. Replace the screw back to position MTH2 and put cover back on the VoicePrism Plus.