

VoiceSolo FX150

tc electronic

Part number	Part name.	Service level		
		1	2	3
Main / Amp board				
7F85811003	PCBA, P22628, 1175, DASH-8, Main/AMP board		x	x
7E49103311	AK5357ETP-E2 - Advanced Multi-Bit Delta-Sigma ADC			x
7E49004811	DSPB56724AG DSP QFP144/P05			x
7E52203111	3 Pol XLR Male for PCB JY-5032A			x
7E34001021	Pushbutton switch WPS-2FL-B			x
7E15600511	0R0 5% 1210 0.125W CHIP RESISTOR. To be used for Service note Sno-T208		x	x
UI board				
7F85812003	PCBA, P22677, 1175, DASH-8, UI Board		x	x
7E34001611	PEC12-4220F-N0024 ENCODER			x
7E12200101	RK09K113(10Kb) POTENTIOMETER 20%			x
USB board				
7F85813003	PCBA, P22676, 1175, DASH-8, USB Board		x	x
7E34001021	Pushbutton switch WPS-2FL-B			x
Drivers				
7E61602212	6,5" ICT driver, 1175 DASH-8, SDS-160F25PR01-04		x	x
Power Supply				
7E50002111	SMPS Adapter base PowerPlug42.5	x	x	x
Miscellaneous				
7E57504111	DR05113-B, Overmoulded knob for HANS	x	x	x
7E57505011	DR05124-D, Overmoulded knob for AC/EC UI	x	x	x
7E57506613	DR05139-C, Switch Cap Guide for HANS		x	x
7E57508711	Switch Cap for PT series Switch, 1140 Q400		x	x
7E57512312	DR05090-C, 1175, DASH-8, Cone for Mic Stand	x	x	x
7E57512412	DR05091-C, 1175, DASH-8, KeyPad, S05091A01			x
7E57512112	DR05086-C Upper-Hook VoiceSolo FX150		x	x
7E57512013	DR05084-D Lower-Hook VoiceSolo FX150		x	x