

VoiceWorks



7E33800501
Power Button, DR-01113

7E33905111
Small Plastic knob Ø13mm

7E33905111
Small Plastic knob Ø13mm

7E33800402
Big Plastic knob Ø30

7E58100301
Side Panel

7E33600601
LCD Display
MC1602C8-SYL

Cap for buttons:

7E33901202 ">", Cap For Button Without Led

7E33800701
Inlet For Button Without Led

7E33800601
Console For Button

7E33801401
Inner Button 4X4, clear
7E33801501
Cap for Button 4X4

7E58100301
Side Panel

Cap for buttons:

7E33904162 MEN "X000", Cap For Button With Led
 7E33904172 MEN "0X00", Cap For Button With Led
 7E33904182 MEN "00X0", Cap For Button With Led
 7E33904192 MEN "000X", Cap For Button With Led
 7E33904142 HARMONY, Cap For Button With Led
 7E33904132 THICKEN, Cap For Button With Led
 7E33904122 PITCH CORRECT, Cap For But. w. Led
 7E33904112 EFFECT TAP TEMPO, Cap For But. w. Led
 7E33904152 SONG MODE, Cap For Button With Led
 7E33902402 SETUP, Cap For Button With Led
 7E33900902 STORE, Cap For Button With Led
 7E33902502 BYPASS, Cap For Button With Led
 7E33901002 ENTER, Cap For Button With Led
 7E33901102 RECALL, Cap For Button With Led

7E33800801
Inlet For Button With Led

7E33800601
Console For Button