

TC order no:	Partname.
<b>Front Section</b>	
7B81830001	VoiceWorksPlus front PCB w/display
7E33600601	LCD Display MC1602C8-SYL
7E33905111	Small Plastic knob 13mm with "-"
7E33800301	DR01101-1, Encoder Knob Ø13 Manhattan without marking
7E33800402	Big Plastic knob Ø30 For Mnhatn DR-01102
7E33800501	Power Button, DR-01113
7E33801401	DR01115-C, Inner Button 4X4 - Clear
7E33801501	DR01116-A, Cap for Button 4X4
7E33800802	Inlet For Button With Led
7E33800602	Console For Button
7E33900902	STORE, Cap For Button With LED
7E33902402	SETUP, Cap For Button With LED
7E33900302	EDIT , Cap For Button With LED
7E33902502	BYPASS, Cap For Button With LED
7E34000301	ENC/EC12E24204 ENCODER (EDIT 1,2,3,4.)
7E34000801	ENC/EC12E24244F20 ENCODER with push switch
7E34000201	Power switch SW/SPPH43
<b>Main board</b>	
7B81810001	VoiceWorks Plus Main Board PCBA f. Service
7E48100115	512K8 HIGH SPEED SRAM (GSI) SOJ36/400
7E22000701	100uF 20% 63v ELEC.CAP. PCAPR200-400
7E47100201	INA163 Burr Brown Mic_Preamp V SO14
7E48000105	KM416V1000CJ-5 DRAM 1MX16 SOJ-42
7E48402911	VoiceWorksPlus, Flash W/Programme
7E54300011	Cable for MicAmp Gain VoiceWorks/Quintet
7E59700101	Flat Ribbon Cable With 2x10 Pin Connect.
<b>Chassis</b>	
7E58100102	Bottom Plate DR-01041-D
7E58100301	Side Plate, Diecasted Al DR-01002-6
<b>Power supply</b>	
7E50000101	Manhattan Power Supply Unit