

# Harmony Singer

TC order no:	Part name.	Service level		
		1	2	3
<b>Front / UI</b>				
7E12201111	Potmeter, 10K0, 11mm, Linear			x
7E12202501	Pot, 11mm 8 position (6 detents)			x
7E34001411	R13-85 Switch			x
7E34001499	R13-85 Switch, 10 pcs. package			x
7E57504511	DR05117-C, Footswitch collar for HANS, Chrome	x	x	x
7E57508911	Erik DR06115-A, Pot-knob- RAL1013	x	x	x
7E57504311	DR05115-B, Switch Lightpipe for HANS		x	x
7E57511011	DR05163-B, Flush knob RAL1013, for 1215 Q400, SR05163-A02	x	x	x
7E57508711	Switch Cap for PT series Switch, 1140 Q400, SR05163-A01		x	x
7E57511111	DR05114-C, Switchcap for HANS,Color RAL1013	x	x	x
<b>Main</b>				
7E52203111	3 Pol XLR Male for PCB JY-5032A			x
7E52203211	3 Pol XLR Female for PCB JY-5033A			x
7E52300011	DC Power Connector			x
<b>Power supply.</b>				
960899002	PowerPlug 12V	x	x	x
E52304011	Mains plug Australia for TC PowerPlug PSU	x	x	x
<b>Miscellaneous</b>				
7E54602611	USB Cable, A plug to MINI B plug, 1,0m	x	x	x