

Harmony Singer 2

TC order no:	Part name.	Service level		
		1	2	3
Front / UI				
7E12201111	Potmeter, 10K0, 11mm, Linear			x
7E12202501	Pot, 11mm 8 position (6 detents)			x
7E34001411	R13-85 Switch			x
7E34001499	R13-85 Switch, 10 pcs. package			x
7E57504511	DR05117-C, Footswitch collar for HANS, Chrome	x	x	x
7E57508911	Erik DR06115-A, Pot-knob- RAL1013	x	x	x
7E57504311	DR05115-B, Switch Lightpipe for HANS		x	x
7E57508711	Switch Cap for PT series Switch, 1140 Q400, SR05163-A01		x	x
7E57511111	DR05114-C, Switchcap for HANS,Color RAL1013	x	x	x
Jackboard				
7E52203111	3 Pol XLR Male for PCB JY-5032A			x
7E52203211	3 Pol XLR Female for PCB JY-5033A			x
7E52300011	DC Power Connector			x
7E52203611	6,3mm_1/4" Stereo Jack, Right Angle, PCB Mount			x
Main				
7E49004811	DSPB56724AG DSP QFP144/P05			x
7E49103311	AK5357ETP-E2 - Advanced Multi-Bit Delta-Sigma ADC			x
7E49103511	AK4621EFP-E2 Audio Codec SSOP30			x
Power supply.				
960899002	PSU base PowerPlug12V/1A Level VI	x	x	x
E52304011	Mains plug Australia for Honor PSU Level VI	x	x	x
Miscellaneous				
7E57609711	DR11106-A, 1367 Tumbo, Rubber feet, Blk	x	x	x