

| Part number | Part name |
|----------------------|--|
| Front Section | |
| 7B80621001 | VoiceOne front PCB w/display (Not available anymore) |
| 7B80622001 | VoiceOne Display (Not available anymore) |
| | VoiceOne MPU, (Not available anymore) |
| 7E33800402 | Big Plastic knob Ø30 For Mnhatn DR-01102 |
| 7E33800501 | Power Button, DR-01113 |
| 7E33801401 | DR01115-C, Inner Button 4X4 - Clear |
| 7E33801501 | DR01116-A, Cap for Button 4X4 |
| 7E33800802 | Inlet For Button With LED, DR01108 |
| 7E33800602 | DR01104-1, Console For Button |
| 7E33900202 | I/O, Cap For Button With LED |
| 7E33903702 | MIDI/UTIL, Cap For Button With LED |
| 7E33900902 | STORE, Cap For Button With LED |
| 7E33902502 | "BYPASS", Cap For Button With LED |
| 7E33901002 | "ENTER", Cap For Button With LED |
| 7E33901102 | RECALL, Cap For Button With LED |
| 7E33901202 | ">", Cap For Button Without Led |
| 7E33905111 | Small Plastic knob for Manhattan |
| 7E34000201 | Power switch SW/SPPH43 |
| Main board | |
| 7B80110015 | Base Line, Main Board PCBA XLR VoiceOne |
| 7E22000701 | 100uF 20% 63v ELEC.CAP. PCAPR200-400 |
| 7E48100115 | 512K8 HIGH SPEED SRAM |
| 7E47100201 | INA163 Burr Brown Mic_Preamp V SO14 |
| 7E48000105 | KM416V1000CJ-5 DRAM 1MX16 SOJ-42 |
| 7E48401101 | VoiceOne, FLASH W/Program (Not available anymore) |
| 7E50200011 | ACM3225-102-2P TDM Common Mode |
| 7E59700101 | Flat Ribbon Cable With 2x10 Pin Connect. |
| 7E52203211 | 3 Pol XLR Female for PCB JY-5033A |
| 7E52203111 | 3 Pol XLR Male for PCB JY-5032A |

| Chassis | |
|---------------------|-------------------------------------|
| 7E58100102 | Bottom Plate DR-01041-D |
| 7E58100301 | Side Plate, Diecasted Al DR-01002-6 |
| Power supply | |
| 7E50000101 | Manhattan Power Supply Unit |