

Service parts for XO24

Part number	Text
Front Section	
7B81520001	XO24 Speaker Front-PCB P16510-X for service
7E34000301	ENCODER/EC12E24204 without push function
7E33800402	Big Plastic knob Ø30 For Mnhatn DR-01102
7E33800501	Power Button, DR-01113
7E34000201	Power switch SW/SPPH43 ALPS:SPPH43-*W-A
7E33801401	DR01115-C, Inner Button 4X4 - Clear
7E33801501	DR01116-A, Cap for Button 4X4
7E34000501	TACT switch W/ LED green
7E33801451	DR-01115-C Inner Button 4X4 - Black
7E33600601	LCD Display MC1602C8-SYL
Main board	
7B80110061	BL, Main Board PCB-A XO24 w/program V/BAE
7E48402423	512kX8 39VF040 XO24 20.04 FLASH W/Prog
7E59700101	Flat Ribbon Cable With 2x10 Pin Connect.
Chassis	
7E58100301	Side Plate, Diecasted Al DR-01002-6
7E58100102	DR-01041-D, Bottom Plate SECC
Power supply	
7E50000101	Power Supply Unit
E54700202	Cable U.S.A. Black 3x18 AWG SVT 180 cm.
E54700102	Cable EU Europe Black 3x0.75mm H05VV-F 180 cm