

Enter the self test menu.

1. Power on while pressing "**ARROW UP + LOCK**" and hold till you enter the service mode menu.
2. Choose "*Front test*" and run through the test procedure.
3. Power off and on.