

Air-25 Spareparts.

TC order no:	Part name.	Service level		
		1	2	3
AIR Calibration Equipment				
795299999	AIR Calibration Equipment			x
Flash				
795201010	Flash w/program for Air main			x
Modules / PCB / Comp				
795202003	Service 4-way Slave Main PCB			x
795202004	Service 4-way Master Main PCB			x
795202007	Service Air PSU for Air 25			x
795202010	Service MARY Amplifier - BOM #GAB			x
795200111	Air Master display service-PCB.			x
795200211	Air Slave front service-PCB.			x
795036020	Trafo for AirBase 25 -12/24 120/240V			x
995285001	AIR Digi in card	x	x	x
995284001	AD-AIR option card	x	x	x
501016011	PF0011/30/63 - (BULGIN) IEC Connector (Power inlet)			x
Woofers / Tweeters.				
795037011	87506 Woofer for Air25.		x	x
795037211	84331 Midrange for AIR25		x	x
795037311	81997 Tweeter for AIR25		x	x
795037111	81042 Tweeter & midrange for AIR25.		x	x
795049000	Star, potection for tweeter.		x	x
Chassis.				
576026011	Rubber nibble.		x	x
583036511	R6331-B Backplate for Sub Master Air 25.		x	x
583037511	R6332-A Backplate for Sub Slave Air 25.		x	x
795036050	Trafo for AirBase 25 -12/24 100V		x	x
584059013	R6334-C PSU holder for Air 25.		x	x
591036011	Front display spacere.		x	x
795200012	254067 Air master front cover "New logo"	x	x	x
795200022	254066 Air slave front cover "New logo"	x	x	x

795204011	Brass bushing.		X	X
	4mm Amp module mounting screws.		X	X
Miscellaneous.				
546028012	PC Interface Cable for Air - 3 meter.	X	X	X
544046011	LAN cable, Category 5, shielded, 6 meter	X	X	X
606104919	Air Users manual, US.	X	X	X
610902022	Air PC-IP version 1.50.	X	X	X
E54603911	USB to RS232 converter-cable	X	X	X
547003012	Cable EU Europe Black 3x0.75mm H05VV-F 180 cm	X	X	X
547007012	Cable Australia 3x0.75mm 250 cm	X	X	X
544045511	Cable 8pol PH JST, 150mm Black	X	X	X
544056011	150mm AWG20 with 1x8pol for Air25	X	X	X
795750012	Flexible flat cable, 1000mm, 26pol	X	X	X