

Air-6 Spareparts.

TC order no:	Part name.	Service level		
		1	2	3
AIR Calibration Equipment				
795299999	AIR Calibration Equipment			x
Flash				
795201010	Flash w/program for Air main			x
223534011	Electrolytic 1000u 10V 20% Cap 10*16*5 (C11)			x
Modules / PCB.				
795202001	Service 2-way Slave Main PCB			x
795202002	Service 2-way Master Main PCB			x
700010011	ICE250A-IC (Blue1) Ice Power 250W Treble			x
700010012	ICE250A-IC (Red2) Ice Power 250W Bass			x
795205011	AIR PSU module			x
795200111	Air Master front with display service-PCB.			x
795200211	Air Slave front service-PCB.			x
995285001	AIR Digi in card	x	x	x
995284001	AD-AIR option card	x	x	x
Woofers / Tweeters.				
795034011	84845 Woofer for Air6.		x	x
795031011	81441 Tweeter for Air6/Air 15.		x	x
795049000	Star, protection for tweeter.		x	x
Chassis.				
576026011	Rubber nibble.		x	x
583025011	Back plate Slave.		x	x
583026011	Back plate Master.		x	x
591036011	Front display spacer.		x	x
795200012	254067 Air master front cover "New logo"	x	x	x
795200022	254066 Air slave front cover "New logo"	x	x	x
795204011	Brass bushing.		x	x
	4mm Amp module mounting screws.		x	x

Miscellaneous.				
546028012	PC Interface Cable for Air - 3 meter.	x	x	x
544046011	LAN cable, Category 5, shielded, 6 meter	x	x	x
606104919	Air Users manual, US.	x	x	x
E54603911	USB to RS232 converter-cable	x	x	x
547003012	Cable EU Europe Black 3x0.75mm H05VV-F 180 cm	x	x	x
547007012	Cable Australia 3x0.75mm 250 cm	x	x	x
795750011	Flexible flat cable, 600mm, 26pol	x	x	x