# **BM5** service manual



Section Document # Revision Document owner Date Page 1 of 1
- A KRA 19-03-2014

Version	Changed:	Approved by:	
		Service	Project
		manager	manager
Α	First version of document	DVQ	

## Replaceable parts:

- Tweeter
- Woofer
- Electronics module

### Tweeter replacement:

- 1. Unmount 6pcs screws
- 2. Lift woofer out of cabinet
- 3. Unmount 3pcs screws
- 4. Lift tweeter out of cabinet recess
- 5. Remove cables from tweeter
- 6. Remove gasket from tweeter recess
- 7. Put new gasket into cabinet recess
- 8. Mount cables on new tweeter connectors
- 9. Put tweeter back in cabinet recess
- 10. Make sure that orientation is correct. Litze wires must be horizontal oriented
- 11. Remount 3pcs screws carefully
- 12. Put woofer into cabinet hole
- 13. Carefully remount 3pcs screws
- 14. Hi-pot testing. 2.5kV.
- 15. Function testing

## Woofer replacement:

- 1. Unmount 6pcs screws
- 2. Lift woofer out of cabinet
- 3. Remove cables from woofer
- 4. Remove gasket from woofer hole
- 5. Put new gasket into the cabinet hole
- 6. Mount cables on the new woofer connectors
- 7. Put woofer into cabinet hole
- 8. Carefully remount 3pcs screws
- 9. Hi-pot testing. 2.5kV.
- 10. Function testing

#### **Electronics replacement**

- 1. Remove power from electronics
- 2. Unmount 8pcs screws
- 3. Remove electronics carefully from the cabinet
- 4. Unmount speaker wires
- 5. Mount speaker wires on the new electronics
- 6. Carefully insert electronics into cabinet
- 7. Carefully Remount 8pcs screws
- 8. Hi-pot testing. 2.5kV
- 9. Function testing

NOTE: black is – and blue is +

NOTE: black is – and red is + On driver + is the side where the label item# label is positioned

NOTE: blue/black wire is tweeter and red/black is woofer. Woofer cable is attached closest to the rearpanel. Tweeter and woofer connectors are marked on the circuit board.