M3 XE / M3 VE Speaker box - service manual



Section

Document # Revision **INS-0048**

Document owner JM

Date 9.10.2012 Page 1 of 2

		Approved by:	
Version	Changed:	Service	Project
		manager	manager
A	First version of document		JM

Α

Tweeter replacement:

- 1. Unmount 3 pcs screws
- 2. Lift tweeter out of cabinet recess
- 3. Remove cables from tweeter

- Remove gasket from tweeter recess
 Put new gasket into cabinet recess
 Mount cables on new tweeter connectors
- 7. Put tweeter back in cabinet recess
- 8. Make sure that orientation is correct.
- 9. Remount 3 pcs screws carefully
- 10. Function testing

Midrange-driver replacement:

- 1. Unmount 6 pcs screws
- 2. Lift driver out of cabinet
- 3. Remove cables from driver
- 4. Remove gasket from midrange hole
- 5. Place new gasket around cabinet hole
- 6. Mount cables on new drivers terminals
- 7. Place driver into cabinet hole
- 8. Carefully remount all screws
- 9. Function testing

Woofer replacement:

- Place Speaker on its rear plate, Drivers facing up
 Unmount 8 pcs screws
- 3. Lift driver out of cabinet
- 4. Remove cables from driver
- 5. Mount cables on new drivers terminals
- 6. Place driver into cabinet hole
- 7. Carefully remount all screws
- 8. Function testing

X-over replacement

- 1. Open X-over Coverplate on the rear of speaker by removing 4 screws
- 2. Remove screws from X-over
- 3. Note the wire positions on the X-over
- 4. Carefully solder the wires off from the X-over
- 5. Replace with new X-over
- 6. Carefully solder wires to correct positions
- 7. Mount screws
- 8. Mount Coverplate with screws
- 9. Function testing

NOTE: White/Blue is + and blue is -

+ terminal is the one closest to where the item# label is positioned

NOTE: White/Blue is + and blue is -

NOTE: White/Blue is + and blue is -

+ terminal is the one closest to where the item# label is positioned

M3 XE / M3 VE Speaker box - service manual



Section -

Document # Revision INS-0048

Α

Document owner JM

Date 9.10.2012 Page 2 of 2