

| Service Note | | |
|----------------------|------------------------------|------------------|
| Product | Description: | Service note no. |
| BG500 / BH500 | Pushbuttons are loose | SNo-T0156 |

Reason for note:

We have experienced a few BG500, where the 5 pushbuttons (7E33802041) are loose. This can happen if the buttons have been pressed a bit too hard when assembling the BG500.

Actions:

Please be careful not to use excessive force when replacing the buttons.

IMPORTANT:

N/A