

# VoiceTone Create XT



TC order no:	Part name.	Service level		
		1	2	3
<b>Front.</b>				
7E57504111	Overmoulded knob for HANS DR05113-B	x	x	x
7E57504211	Switch cap for HANS DR05114-C	x	x	x
7E57504311	Switch light pipe for HANS DR05115-B	x	x	x
7E57506613	DR05139-C, Switch Cap Guide for HANS		x	x
7E57504411	Light bar for HANS DR05116-C	x	x	x
7E34001411	R13-85 Switch			x
7E34001499	R13-85 Switch, 10 pcs. package			x
7E57504611	Foot switch collar for HANS DR05117-C	x	x	x
7F84012007	PCBA, P22663, 1118 Jannik VoiceTone V7 UI *		x	x
7E12201011	Potmeter, 2K0, 11mm, 10C taper			x
7E12201211	Potentiometer 11mm Center snap			x
7E49004711	AVR Microcontroller – Jannik			x
<b>Main.</b>				
7F84011010	PCBA, P22621, 1138 Arla Mainboard *		x	x
7E48405311	2Mx8 Flash, VoiceTone Create_USB /W. Program			x
7E49004811	DSP56724 - DUAL CORE 56K DSP			x
<b>Power supply.</b>				
960899002	PowerPlug 12V	x	x	x
E52304011	Mains plug Australia for Honor PSU Level VI	x	x	x
<b>Miscellaneous</b>				
7E54700801	Ribbon Cable for UI board			x
795299998	MIDI s/w upload board			x
7E54602011	USB A plug to USB MINI B plug VT Synth	x	x	x
<b>Chassis.</b>				
7E58103712	HANS Right end cap DR05020-D	x	x	x
7E58103612	HANS Left end cap DR05019-D	x	x	x

\*: For exchange of either Front or Main board it might be necessary to force an AVR update. Please check Service-notes