

VoiceTone Double



TC order no:	Part name.	Service level		
		1	2	3
Front.				
7E57504111	Overmoulded knob for HANS DR05113-B	x	x	x
7E57504211	Switch cap for HANS DR05114-C	x	x	x
7E57504311	Switch light pipe for HANS DR05115-B	x	x	x
7E57504411	Light bar for HANS DR05116-C	x	x	x
7E34001411	R13-85 Switch			x
7E34001499	10 pcs package. R13-85 Switch			x
7E57504611	Foot switch collar for HANS DR05117-C	x	x	x
7E12201011	Potmeter, 2K0, 11mm, 10C taper			x
7E12201211	Potentiometer 11mm Center snap			x
7E49004211	ATmega88 AVR QFP32/P08 (HANS 4M+3C)			x
7F84012002	PCBA, P22651, 1087 V4 VoiceTone Doubler UI-board		x	x
7E59107111	DR05111-B, Lens for VoiceTone Double		x	x
Main.				
7F84011002	PCBA, P22611, 1087 V4 VoiceTone Double Mainboard (Remember always to update software when a spare part board is received)		x	x
7E48401323	Flash IC w/prog for VoiceTone Double			x
7E52300011	DC Power Connector			x
Power supply.				
960899002	PowerPlug 12V	x	x	x
E52304011	Mains plug Australia for Honor PSU Level VI	x	x	x
Miscellaneous				
7E54700801	Ribbon Cable for UI board			x
795299998	MIDI s/w upload board			x
Chassis.				
7E58103712	HANS Right end cap DR05020-B	x	x	x
7E58103612	HANS Left end cap DR05019-B	x	x	x