

VoiceToneHarmony G-XT

tc electronic

| TC order no: | Part name. | Service level | | |
|----------------------|---|---------------|---|---|
| | | 1 | 2 | 3 |
| Front. | | | | |
| 7E57504111 | Overmoulded knob for HANS DR05113-B | x | x | x |
| 7E57504211 | Switch cap for HANS DR05114-C | x | x | x |
| 7E57504311 | Switch light pipe for HANS DR05115-B | x | x | x |
| 7E57504411 | Light bar for HANS DR05116-C | x | x | x |
| 7E57504711 | DR05118-E, Lightpipe Array for HANS | | | x |
| 7E34001411 | R13-85 Switch | | | x |
| 7E34001499 | 10 pcs package. R13-85 Switch | | | x |
| 7E57504611 | Foot switch collar for HANS DR05117-C | x | x | x |
| 7E12201011 | Potmeter, 2K0, 11mm, 10C taper | | | x |
| 7E12201211 | Potentiometer 11mm Center snap | | | x |
| 7F84012017 | PCBA, P22663, VoiceTone Harmony G-XT UI * | | x | x |
| 7E49004711 | AT90USB162 AVR QFP32/P08 (1118 Jannik) | | | x |
| 7E59108013 | DR05138-A, LENS, 1137 VT HarmonyG XT USB, S05138A05 | | x | x |
| 7E57506613 | DR05139-C, Switch Cap Guide for HANS | | x | x |
| Main. | | | | |
| 7F84011009 | PCBA, P22614, 1137, Munk V8 VoiceTone HarmonyG XT Mainboard * | | x | x |
| 7E48405111 | VT HarmonyG USB/W Program | | | x |
| 7E52300011 | DC Power Connector | | | x |
| Power supply. | | | | |
| 960899002 | PowerPlug 12V | x | x | x |
| E52304011 | Mains plug Australia for Honor PSU Level VI | x | x | x |
| Chassis. | | | | |
| 7E58103612 | DR05019-D, HANS Left endcap Die cast | x | x | x |
| 7E58103712 | DR05020-D, HANS Right endcap Die cast | x | x | x |
| Miscellaneous | | | | |
| 7E54700801 | Ribbon Cable for UI board | | | x |
| 795299998 | MIDI s/w upload board | | | x |
| 7E57601411 | DR05112-C, Non-slip Rubber Mat for HANS | x | x | x |
| 7E54602011 | USB A plug to USB MINI B plug. | x | x | x |

*: For exchange of either Front or Main board it might be necessary to force an AVR update. Please check Service-notes