

VoiceTone Synth

TC order no:	Part name.	Service level		
		1	2	3
Front.				
7E57504111	Overmolded knob for HANS DR05113-B	x	x	x
7E57504211	Switch cap for HANS DR05114-C	x	x	x
7E57504311	Switch light pipe for HANS DR05115-B	x	x	x
7E57506613	DR05139-C, Switch Cap Guide for HANS		x	x
7E57504411	Light bar for HANS DR05116-C	x	x	x
7E34001411	R13-85 Switch			x
7E34001499	R13-85 Switch, 10 pcs. package			x
7E57504611	Foot switch collar for HANS DR05117-C	x	x	x
7F84012007	PCBA, P22663, 1118 Jannik VoiceTone V7 UI *		x	x
7E12201011	Potmeter, 2K0, 11mm, 10C taper			x
7E12201211	Potentiometer 11mm Center snap			x
7E49004711	AVR Microcontroller – Jannik			x
Main.				
7F84011007	PCBA, P22614, 1118 Jannik VoiceTone V7 Mainboard *		x	x
7E48404811	2M X 8 FLASH, VOICETONE SYNTH/W PROGRAM			x
7E49004811	DSP56724 - DUAL CORE 56K DSP			x
7E52300011	DC Power Connector			x
Power supply.				
960899002	PowerPlug 12V	x	x	x
E52304011	Mains plug Australia for Honor PSU Level VI	x	x	x
Miscellaneous				
7E54700801	Ribbon Cable for UI board			x
795299998	MIDI s/w upload board			x
7E54602011	USB A plug to USB MINI B plug VT Synth	x	x	x
Chassis.				
7E58103712	DR05020-D, HANS Right endcap Die cast	x	x	x
7E58103612	DR05019-D, HANS Left endcap Die cast	x	x	x

*: For exchange of either Front or Main board it might be necessary to force an AVR update. Please check Service-notes