



- LD6 ARM R1
- LD5 ARM R2
- LD8 ARM G1
- LD7 ARM G2

- LD2 D+1V1 Error
- LD3 D+1V45 Error
- LD10 D+1V8 Error
- LD11 D+3V3 Error

imp.test

L5 GND L4

50 ohm +/-10%

100 ohm dif +/-10%

imp.test

L5 GND L4