

Ditto x4
Looper

Part number	Part name.	Service level		
		1	2	3
Main Board		1	2	3
7F85911041	PCBA, P22634, Main Board for Ditto X4 Looper		X	X
7E43401198	Ditto X4 Micro-SD Card 4GB Flash	X	X	X
7E49103511	AK4621EFP-E2 Audio Codec SSOP30			X
7E52300011	DC Power Connector			X
7E50500511	Relay, DPDT, latching, single coil			X
UI Board				
7F85912041	PCBA, P22680, UI Board for Ditto X4 Looper		X	X
7E12203001	Potentiometer linear 10k 0,05W 20%			X
7E12202701	Erik Potentiometer linear 9mm			X
7E34005711	Toggle switch 3 positions momentary			X
7E34003711	Erik Toggle switch 2 positions			X
7E34004211	TACT Switch Lead 12mm			X
Miscellaneous				
7E34004111	Foot Switch Actuator, PB-4066C		X	X
7E54602911	Wire harness #1, FlashBack X4 (with 4 plugs)		X	X
7E56200211	Screw, M3x8,0mm WN1552 EJOT PT TYP D6		X	X
7E57605312	DR06217-B, flashback x4 Rubber Feet, Black	X	X	X
7E58209413	DR06108-C, Footswitch TOP nut			X
7E57510713	DR06212-D, Plastic Knob, Black	X	X	X
7E54602611	USB Cable, A plug to MINI B plug, 1,0m	X	X	X
Power supply.				
960899001	PSU base PowerPlug 9V	X	X	X
E52304011	Mains plug Australia for TC PowerPlug PSU	X	X	X