

Shaker Mini Vibrato



Part number	Part name.	Service level		
		1	2	3
7E58209413	DR06108-C, Footswitch TOP nut	X	X	X
7E34006011	Foot Switch Actuator, SF12030F-029			X
7E57605299	10 pcs DR06222 Rubber bottom for the mini serie	X	X	X
7E57513411	DR10001-A, 1289, Greenpod, Plastic Knob, RAL 1013	X	X	X
7E12203811	Potentiometer Linear Vertical 7mm 20%			X
7E50500511	Relay, DPDT, latching, single coil			X
7E52300011	DC Power Connector			X
7E34004211	TACT Switch Lead 12mm			X
7E56200211	Screw, M3x8,0mm WN1552 EJOT PT TYP D6		X	X