

VoiceDoubler Spare partlist

Part number	Text
Front Section	
7E33800501	DR-01113-1, Power Button
7E33800602	DR-01104-1, Console For Button
7E33902502	"BYPASS", Cap For Button With Led
7E33900902	"STORE", Cap For Button With Led
7E33902302	"EDIT", Cap For Button With Led
7E33901102	"RECALL", Cap For Button With Led
7E34000101	TACT Switch SW/TACT2 IT-1102-T
7E33600601	LCD Display MC1602C8-SYL
7E34000301	ENCODER/EC12E24204 without push function
7E33905111	Small Plastic knob 13mm for Manhattan with "-"
7E33800301	DR01101-1, Encoder Knob Ø13 Manhattan without marking
7E34000801	ENCODER EC12E24244F20 w/ push function
7E33800402	Big Plastic knob Ø30 ForMnhatnDR-01102-1
7E59700101	Flat Ribbon Cable With 2x10 Pin Connect.
7E34000201	Power switch SW/SPPH43 ALPS:SPPH43-*W-A
7E33800501	Power Button, DR-01113
7E33800802	Inlet for button with led DR-01108
Main board	
7F81921001	PCBA, P16511, VoiceDoubler Main
7E48100115	512K8 HIGH SPEED SRAM
7E47100201	INA163 Burr Brown Mic_Preamp V SO14
7E48000105	KM416V1000CJ-5 DRAM 1MX16 SOJ-42
7E59700101	Flat Ribbon Cable With 2x10 Pin Connect.
7E52200401	XLR NC3FA-H-2 - Female
Chassis	
7E58100102	Bottom Plate DR-01041-D
7E58100301	Side Plate, Diecasted Al DR-01002-6
Power supply	
7E50000101	Power Supply
Miscellaneous	
E54700202	Cable U.S.A. Black 3x18 AWG SVT 180 cm.
E54700102	Cable EU Europe Black 3x0.75mm H05VV-F 180 cm
547004011	Cable UK with 5 Amp fuse Black