


Bias adjustment

Adjust idle-current with VR1 (See **yellow** arrow in picture blow) according to list below. Measure over the resistor shown with **red** arrow in the picture below.

NOTE! Idle-current adjustment should be done straight after start up. Idle current may change when the module becomes warm.

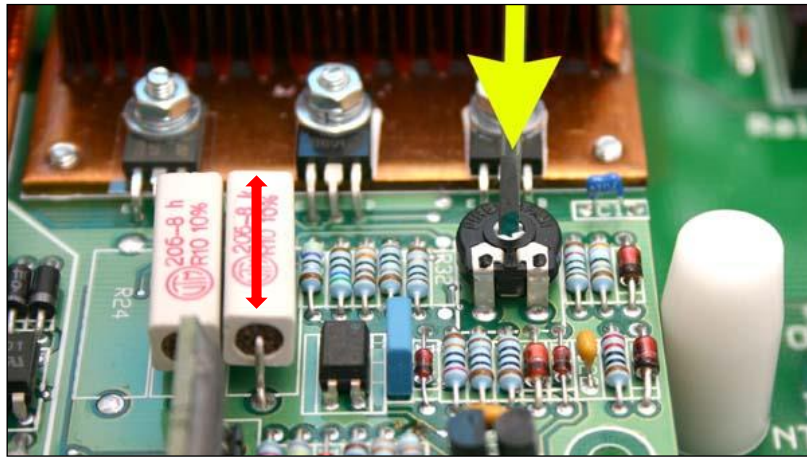

	Model	Idle reading	
1.	A25TDXXx-M01 (F02, F03, F04)	3mV	+/- 0.1mV
2.	A25TDXXx-M02 (F01)	6mV	+/- 0.1mV
3.	A25TDXXx-M03 (F05, F06)	2mV	+/- 0.1mV
4.	A60TDXXx	2mV	+/- 0.1mV
5.	A70TDXXX-F01 / A50TDXXX-F01	3.5mV	+/- 0.1mV
6.	A70TDXXX-F02 / A50TDXXX-F02	4mV	+/- 0.1mV
7.	A70TDXXX-F03	3mV	+/- 0.1mV