

INSTRUKTION ON HOW TO CHANGE SERIAL NUMBER FOR LM26/44

1. Connect the LM with a network cable to your computer and start the AMP


2. Extract the folder LakeService_1.0.0 that can be downloaded from the tech server

Name	Date modified	Type	Size
AICO serial number assignment	2013-12-19 15:48	Compressed (zipp...	886 KB
Instruktion	2014-01-09 14:13	Microsoft Word D...	318 KB
LakeService_1.0.0	2013-12-19 16:20	Compressed (zipp...	214 KB

3. Open the program LakeService


Name	Type	Compressed size	Password ...	Size	Ratio	Date modified
LakeService	Application	213 KB	No	494 KB	57%	2013-12-19 16:19

4. Chose the correct Network that's connected to the LM

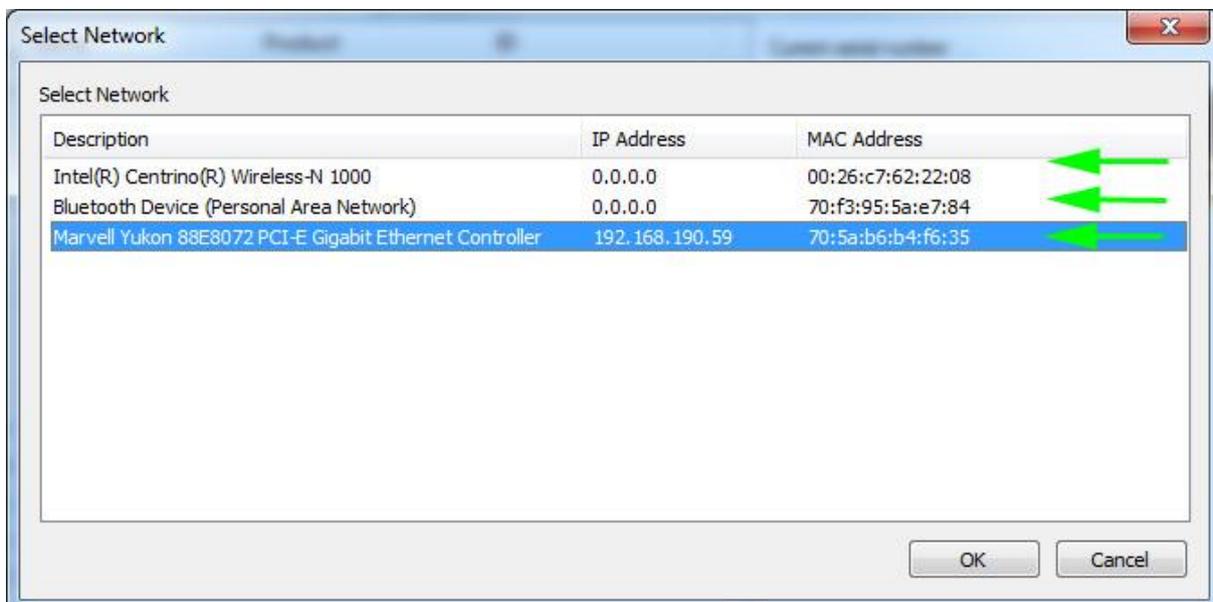


INSTRUKTION ON HOW TO CHANGE SERIAL NUMBER FOR LM26/44

5. Make sure that the information for Name, Product, ID and Serial number appears

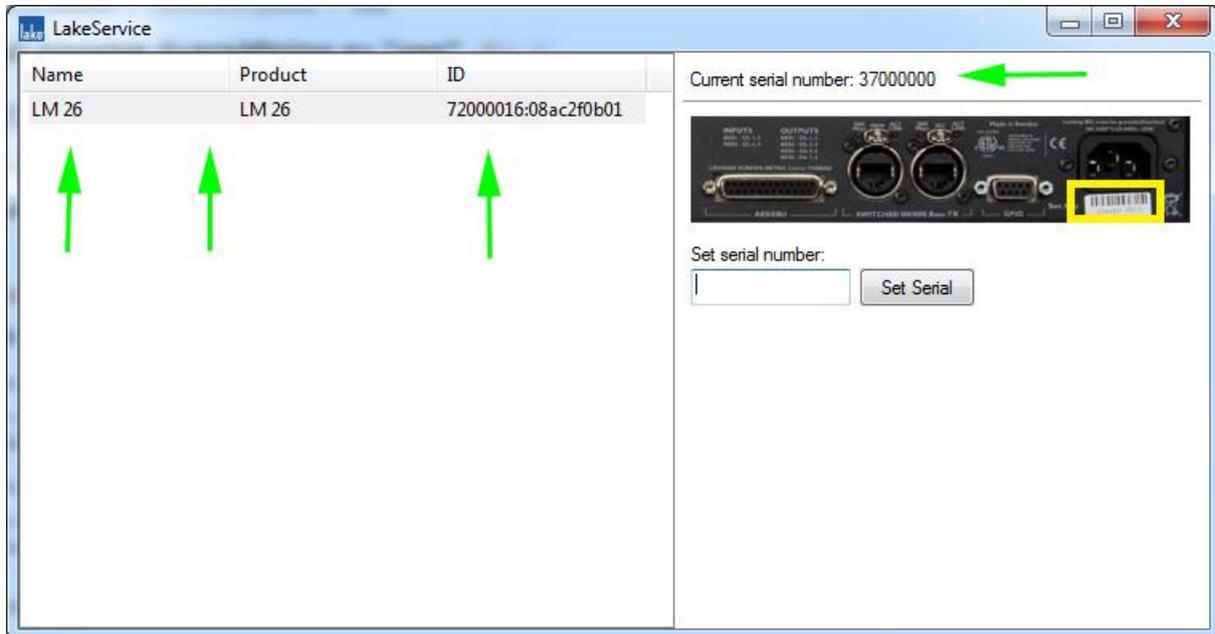


6. Write the serial number from the sticker that appears in the rear panel, you can also find the serial number inside the LM. **This is very important as two identical serial numbers cannot exist in the same network**

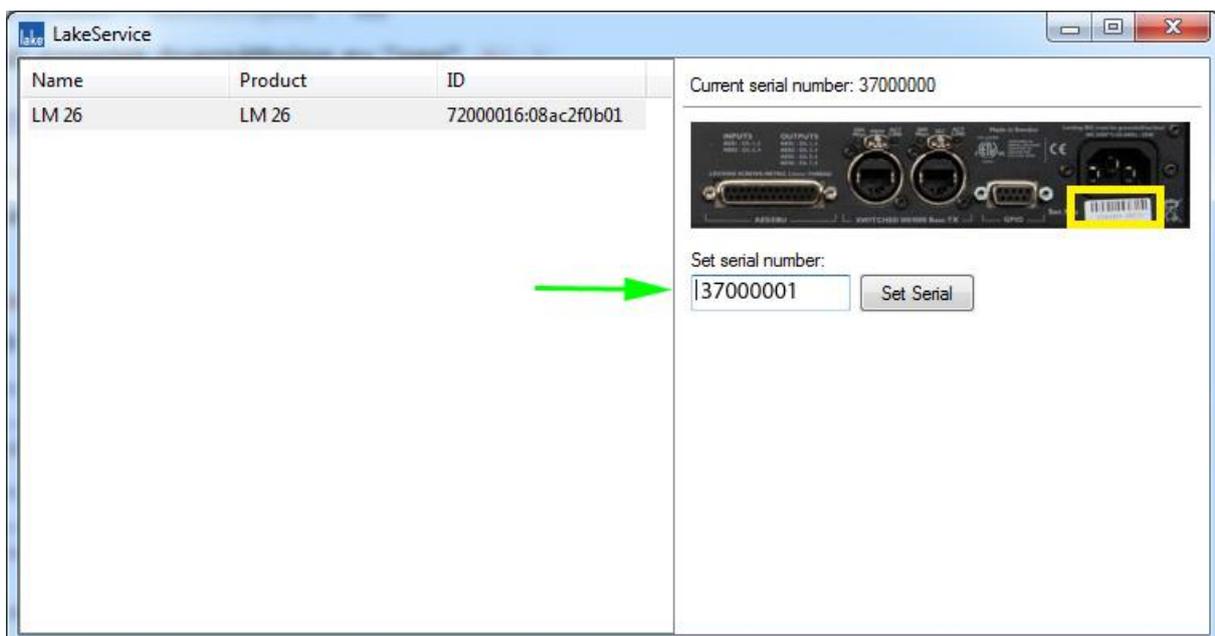


INSTRUKTION ON HOW TO CHANGE SERIAL NUMBER FOR LM26/44

7. A new window will appear to confirm that you typed the correct serial number after that press ok

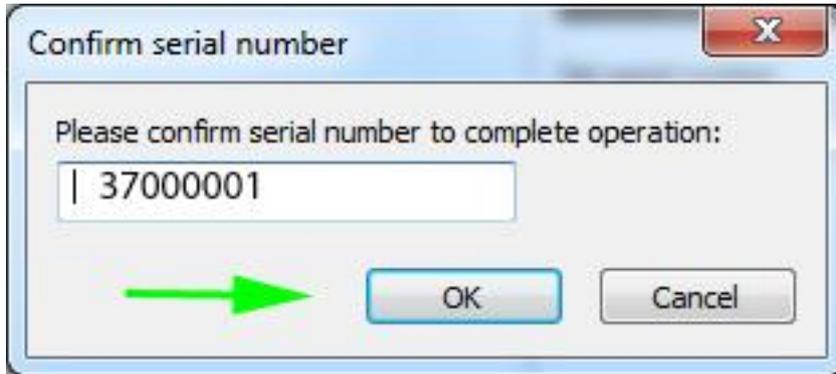

8. A new window should appear confirming that the serial number was successfully changed.

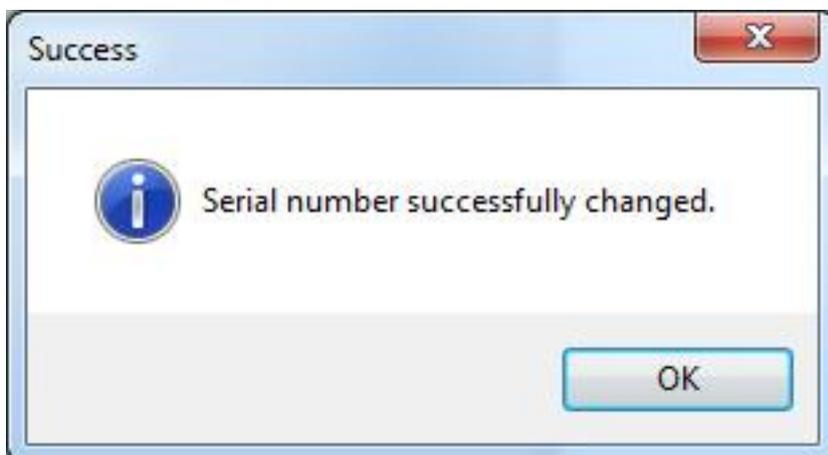

INSTRUKTION ON HOW TO CHANGE SERIAL NUMBER FOR LM26/44

9. The new item number should appear if anything goes wrong restart the amp and try again

