

BUILT FOR PRO TOOLS | HD[®]



MD3

STEREO MASTERING

TC Support Interactive

The TC Support Interactive website www.tcsupport.tc is designed as an online support and information center. At the site you can find answers to specific questions regarding TC software and hardware. All known issues are stored in a database searchable by product, category, keywords, or phrases. Under the section "My Stuff" you can login to check the status of your questions, download materials such as product manuals, software updates and new presets.

This site has been specifically designed to meet the needs of our users. We constantly update the database and you will find the site to be a huge resource of information. Browse through Q&A's and discover new aspects of your TC product.

If you can't find an answer online, you have the option of submitting a question to our technical support staff who will then reply to you by e-mail. The TC Support Team is on constant alert to help you in any way they can.

The screenshot shows the TC Support Interactive website interface. At the top left is the logo "TC SUPPORT INTERACTIVE". Below it is a navigation bar with links: "Support Home", "Answers", "E-Mail Us", "My Stuff", "Login", and "Help". The main search area includes a "Product Line" dropdown menu (set to "All Product Lines"), a "Category" dropdown menu (set to "All Categories"), a "Search Text (optional)" input field, and a "Search" button. There is also a "Search By" dropdown menu (set to "Phrases") and a "Powered by RIGHT TO USE" logo. Below the search area, it indicates "854 Answers Found" and "Page: 1 of 43". A table of search results is shown with columns for "Summary" and "Product".

Summary	Product
1 New - When will VSS3 PowerCore be ready?	multiple
2 New - DSP usage with VSS3 PowerCore	VSS3 POWERCORE
3 Updated - 3rd party developers making plug-ins for the PowerCore platform	multiple
4 PowerCore driver version 1.9.2	multiple
5 New - Storing settings in Preset Direct Mode	VOICELIVE

Contact Details

Alternatively, you may contact the TC Electronic distributor in your area, or write to:

TC ELECTRONIC A/S
Customer Support
Sindalsvej 34
Risskov DK-8240
Denmark

USA:
TC Electronic, Inc.
5706 Corsa Avenue, Suite 107
Westlake Village, CA 91362

www.tcelectronic.com

© BY TC ELECTRONIC A/S 2006. ALL PRODUCT AND COMPANY NAMES ARE TRADEMARKS OF THEIR RESPECTIVE OWNERS. ALL SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE. ALL RIGHTS RESERVED.
TC ELECTRONIC IS A TC GROUP COMPANY.

TABLE OF CONTENTS

TABLE OF CONTENTS	.1
INTRODUCTION TO MD3 Stereo Mastering Package	.2
GETTING STARTED	.3
SYSTEM REQUIREMENTS	.3
GLOBAL PLUG-IN CONTROLS	.3
PROCESSING DELAY	.4
PARAMETER OVERVIEW	.5
MAIN PAGE	.6
EXPANDER COMPRESSOR	.8
EQ PAGE	.9
NORMALIZER PAGE	.12
EXPANDER PAGE	.13
COMPRESSOR PAGE	.15
OUTPUT PAGE	.17
BRICKWALL LIMITER	.19
PRESET MANAGEMENT	.21
CONVERTING MD3 PRESETS FROM SYSTEM 6000	.22
COMPARE SETTINGS WITH A/B MEM FUNCTION	.24
PARAMETER LOCK AT PRESET RECALL	.25

Introduction

TC Electronic is proud to introduce the MD3 Stereo package for Pro Tools. This package includes both our MD3 Multi-Band Dynamics and BrickWall Limiter algorithms, the finest stereo mastering tools from our award winning System 6000.

MAIN FEATURES

- Four band Parametric EQ (Dual Mono capability)
- Normalizer
- Three band Exp/Comp/Lim
- MS Encode/Decode
- Sample accurate BrickWall Limiter

MD3

The MD3 plug-in features both Dual Mono and Stereo dynamics processing in three frequency bands. It's pristine signal-path uses 48 bit processing.

Make-up gain can be applied automatically or manually, so the algorithm can be set-up to do everything from strictly limiting to level maximization.

By offering a true side-chain split structure, MD3 is also capable of demanding mono material compression/limiting on two separate channels , not found in other multi-band dynamics processors.

Used for mastering, MD3 can be regarded as a high-end mastering tool. M and S components of a stereo signal can be processed separately and provide even more control making full use of the Spectral Stereo Enhancer.

I/O PAGE / HEAD ROOM

In case you are working with very hot signal levels in your audio application, you might experience clipping of the input of the MD3 or BrickWall limiter algorithm.

In that case, we recommend that you lower the output level of the previous plug-in , or turn down your input channel or send level.

If this does not help, you can use the build-in headroom parameter on the plug-in I/O page, to get an additional head room. Please be aware that this results in a loss of bit resolution.

Setting the Head Room parameter to a value different from 0 dB will change two gains: the native input gain is set to reduce the signal level, while the gain at the input to the 48 bit algorithm is set to make up that reduction. The advantage of this is that any of the algorithm parameters (especially thresholds) will affect the signal in the same way, independent of the headroom setting.

The disadvantage is that some of the lower bits are lost in the 24 bit path to the algorithm. On the other hand, the same loss would happen when you would reduce the signal via an input level parameter.

The MD3 TDM version runs on Pro ToolsHD and Pro ToolsHD Accel hardware, including the Venue console, at sample rates from 44.1 kHz to 96kHz, with Pro Tools software 6.9 or higher.

TOOLTIPS

If you are just getting started with the MD3 Stereo Mastering Package and you want to know what all the parameters do, press the question mark Icon to activate the tooltip function. When activated, moving the mouse over the different parameters will display information about the parameter functionality. Of course you can disable the tooltips, as soon as you know your way around.

SYSTEM REQUIREMENTS

- Mac OS X (10.4 or higher) / Windows XP
- Pro Tools TDM 7.2.1 software (or higher)
- Pro Tools HD or HD Accel hardware
- iLok USB key
- iLok.com account and internet access required for product authorization
- System must meet Digidesign's system requirements for Pro Tools TDM systems!

Global Plug-In Controls

KEYBOARD COMMANDS

The TDM versions of MD3 & BrickWall Limiter supports keyboard commands for certain functions. The following key commands are available for all plug-in parameters:

Key Commands in Mac OS X:

Fine Adjust = Apple key + mouse movement

Reset To Default = Option + mouse click

Key Commands in Windows:

Fine Adjust = Ctrl + mouse movement

Reset To Default = Alt + Control + mouse click

AUTOMATION

Please be aware that automation of certain parameters, can cause audible artifacts. In case you need to automate these parameters, you should take care that changes only take place in parts where no audio is sent to the plug-in.

FOCUS FIELDS

You can place your own set of parameters in the 6 focus fields at the bottom of the plug-in.

Making use of the focus fields can give you a better workflow, since you will not have to switch pages all the time to find the parameters that you work with.

You can assign any parameter to the focus fields, and the focus fields are stored with the session as well as when you save your presets.

Assign	Lo Xover 500 Hz	Hi Xover 4.00 kHz	Comp. All Thresh -4.0 dB	Comp. All Gain 0.0 dB	Comp. All Ratio 2.00 : 1
---------------	---------------------------	-----------------------------	-----------------------------	---------------------------------	------------------------------------

To change the assignment:

- Press the Assign button. The Assign button as well as one of the Focus Fields will be highlighted.
- Select the Focus Field you wish to link a parameter to, by clicking on that field.
- Click on the parameter you wish to link to the selected Focus Field.
- To get an unassigned (empty) Focus Field, click again on the selected parameter.
- Once you have finished the assignments, click again on the Assign button to leave the assign mode.


PARAMETER OVERVIEW

The MD3 is a 3-band 2-Channel Dynamics processing algorithm. The algorithm contains:


- Stereo four band precision EQ (Linked or Dual-mono operation)
- Stereo 3-band compression with linked or separate SideChains
- MS-Encode/Decode at the Input and Output

The MD3 will run at sample rates up to 96kHz

Signal flow through the algorithm:

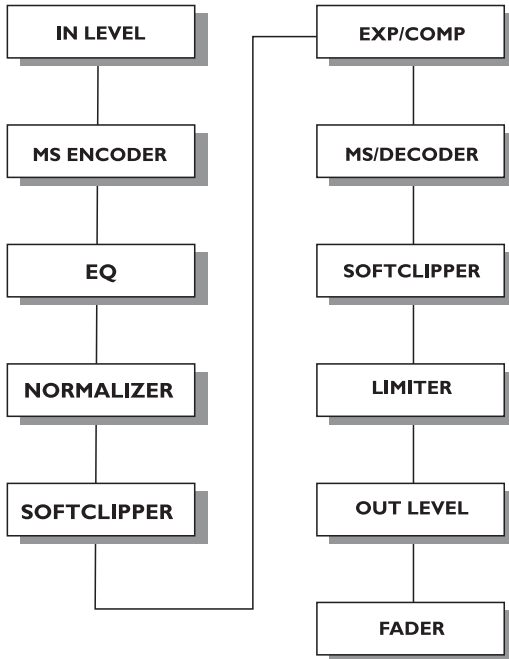

Main Page

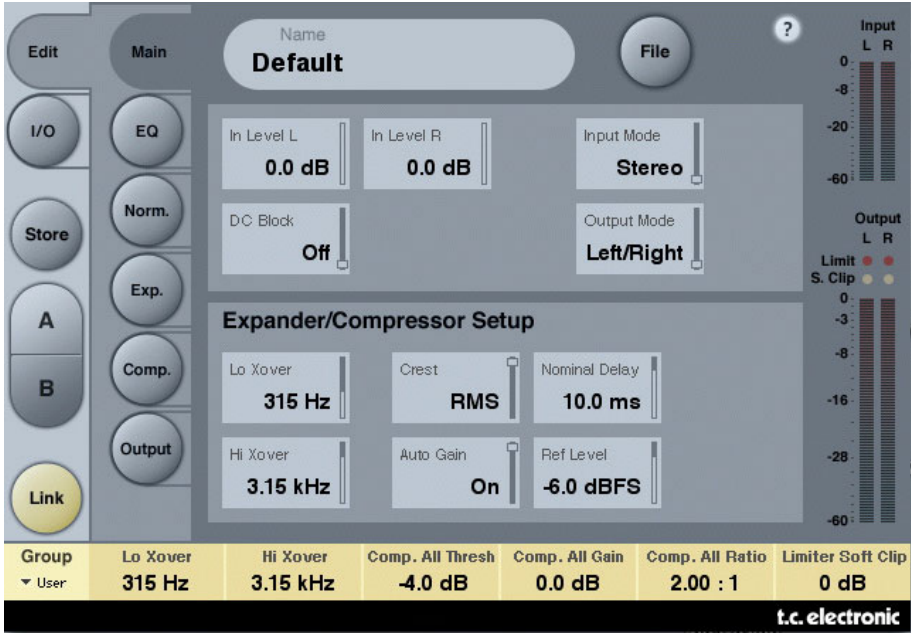

Inlevel Left and Inlevel Right

Range: Off to 0dB

<-40dB: in 3dB steps

>-40dB in 0.5dB steps

Sets the Input level for the two Input channels

Input Mode

Range: Stereo, Dual Mono, MS Linked, MS Unlink.

Selects the Input mode.

Stereo

In Stereo Mode the Expander/Compressor section of the algorithm uses one common SideChain for both Left and Right channels and the EQ section is linked.

Please note that when coming from e.g. Dual Mono mode EQ settings from the Left channel will be copied to the right channel.

Dual Mono

In Dual Mono mode the Expander/Compressor section of the algorithm uses separate SideChains for the Left and Right Channel and they can be operated individually.

Linked

In the MS Linked mode the MS Encoder is activated and the Expander/Compressor section of the algorithm uses one common SideChain for both Left and Right channels. EQ is unlinked.

MS Unlinked

In the MS Unlinked mode the MS Encoder is activated and the Expander/Compressor section of the algorithm uses separate SideChains for the Left and Right Channels. EQ is unlinked.

NOTE : When a mono signal is processed, only the left channel of the algorithm is active

Output Mode

Range: Left/Right, MS

Left/Right : Straight Output without MS Decode.

MS : MS decode before the limiter section.

DC block

Range: Off, On

The DC block is a Lo Cut filter used to remove potential DC-noise at 2Hz.

EXPANDER/COMPRESSOR SETUP

Lo Xover

Range: Off, 25, 32, 40, 50, 63, 80Hz 16kHz

Sets the Cross-over frequency between the Lo and Mid Expander/Compressor bands for the two channels.

Hi Xover

Range: Off, 25, 32, 40, 50, 63, 80Hz 16kHz

Sets the Cross-over frequency between the Mid and the Hi Expander and Compressor bands for the two channels.

NOTE : The Lo Xover value can not be higher than the Hi Xover.

Crest

Range: Peak, 6, 10, 12, 14, 16, 20, 24, RMS

Select compression method between RMS and PEAK for all three bands. The dB steps between RMS and Peak are number of dBs needed for a peak-value to override RMS measurement and can be perceived as a Threshold setting.

Example:

If the Crest parameter is set to 6dB, the Compressor will respond to RMS values and to peaks 6dB higher than the current RMS value.

Auto Gain

Range: Off/On

Switches the Automatic Make-up gain on or off for the Compressor bands. When set to on the gain for each band is adjusted according to Threshold and Ratio settings. When set to off, no automatic gain adjustments are performed

Nominal Delay

Range: 0 to 15ms

<2ms in 0.1ms steps

>2ms in 0.5 ms steps

Sets the nominal Delay of the signal compared to the Sidechain signal. This is also known as "Look ahead delay", enabling the compressor section to become more responsive to the incoming signal thereby performing a more precise compression.


Reference Level

Range: -24dBFS to 0dBFS in 0.5dB steps

This parameter sets the reference level in the algorithm.

The reference level is the level at which the Compressor Threshold parameters will start operating when set to 0dB.

EQ Page

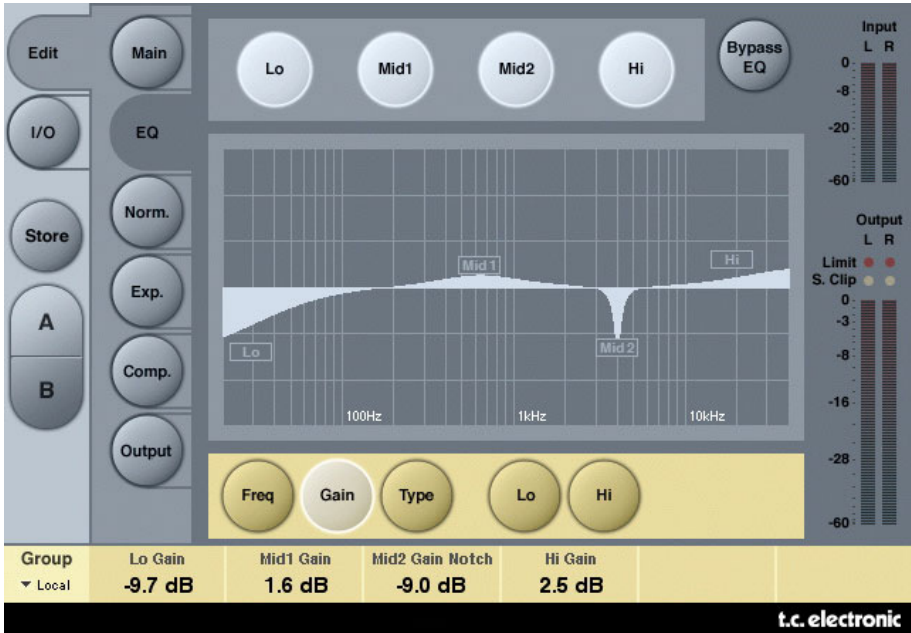

INTRODUCTION

This digital EQ features a four-band parametric EQ with high- and low-pass filters switchable between Notch, Parametric, Shelving and Cut filters. The needle sharp notch filter has a range down to 0.01 octave and the shelving filters has a variable slope, ranging from gentle 3 dB/oct over 6 and 9 to 12dB/oct. Cut filters are switchable between 12dB/oct maximum flat amplitude (Butterworth) or flat group delay (Bessel) types. The parametric equalizer features a natural and well defined bandwidth behavior at all gain and width settings:

BASIC OPERATION

- Press keys Lo, Mid1, Mid2 and Hi to activate/deactivate the EQ bands.
- Select Freq, Gain, Type or Lo/Hi to access all four parameters on individual bands.
- Press Bypass EQ to bypass all four bands.


TYPE SELECTOR

- Press Type and use faders 1-4 to select filter types.


Mid 1 and Mid 2 filters options:
Parametric and Notch.

Lo and Hi filter options:
Parametric, Notch, Shelve and Cut.


Parametric Filter - Broad type

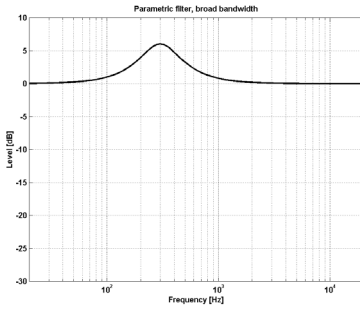


Shelving Filter

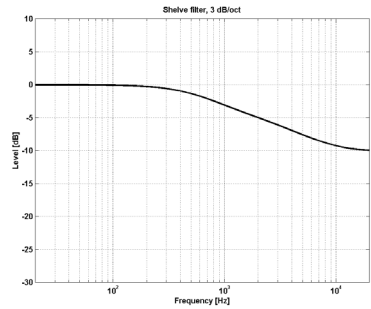


Notch Filter - Narrow Type

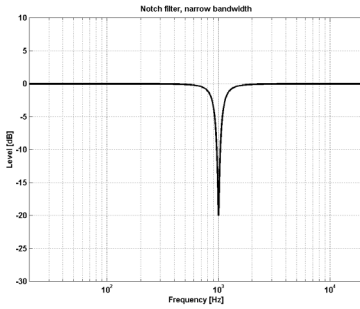

Cut Filter - Bessel type

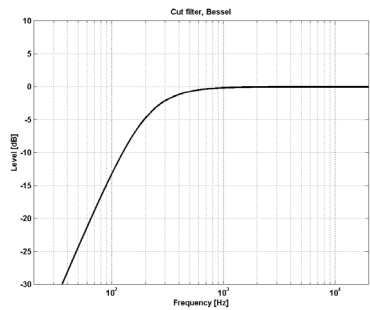

Cut Filter - Butterworth type

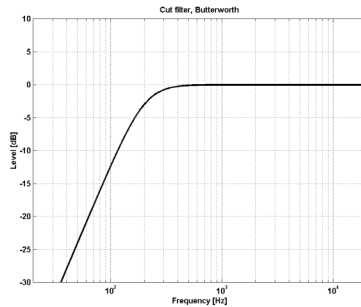

Freq

Press Freq and use Faders 1 to 4 to adjust frequency for each of the four bands.

Range - Lo band : 20Hz to 20kHz
Range - Mid1 band : 20Hz to 20kHz
Range - Mid2 band : 20Hz to 20kHz
Range - Hi band : 20Hz to 40kHz

Gain

Press Gain and use Faders 1 - 4 to adjust gain for each of the four EQ bands.

Range for the Parametric, Shelve and Cut type:

Lo Gain : -12dB to +12dB
Mid1 Gain : -12dB to +12dB
Mid2 Gain : -12dB to +12dB
Hi Gain : -12dB to +12dB

Range for the Notch filter:

Lo Gain : -inf; -97dB to 0dB
Mid1 Gain : -inf; -97dB to 0dB
Mid2 Gain : -inf; -97dB to 0dB
Hi Gain : -inf; -97dB to 0dB

TYPE

Range for the Notch filter:

Lo BW : 0.02oct to 1oct
Mid1 BW : 0.02oct to 1oct
Mid2 BW : 0.02oct to 1oct
Hi BW : 0.02oct to 1oct

Range for the Parametric filter:

Lo BW : 0.1oct to 4oct
Mid1 BW : 0.1oct to 4oct
Mid2 BW : 0.1oct to 4oct
Hi BW : 0.1oct to 4oct

Range for the Shelve filter:

Lo BW : 3dB/oct to 12dB/oct
Hi BW : 3dB/oct to 12dB/oct


Range for the Cut filter:

Lo BW : Bessel or Butterworth
Hi BW : Bessel or Butterworth

Bandwidth/Q - Key-Values:

BW		Q
0.5	-	2.87
0.7	-	2.04
1.0	-	1.41

Normalizer

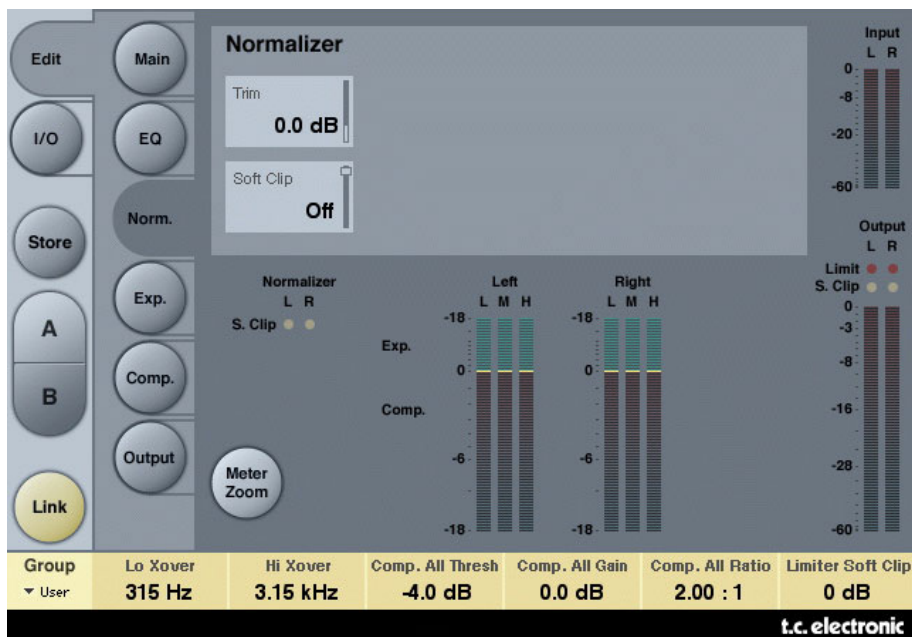

When using the EQ section (located just before the Normalizer) the gain might have been increased or decreased. The Normalizer is used to optimize the gain before hitting the Expander/Compressor section.

Trim Left and Trim Right

Range: -6 to +18dB in 0.1dB steps

Level parameter between the EQ and Exp/Comp section.


When Input Mode is set to Stereo the parameters will be linked.

Soft clip

Range: +5dB; Off

The Soft clipper is placed between the Normalizer and Exp/Comp section. By enabling the Soft clipper you are able to reduce potential overshoots.

Expander

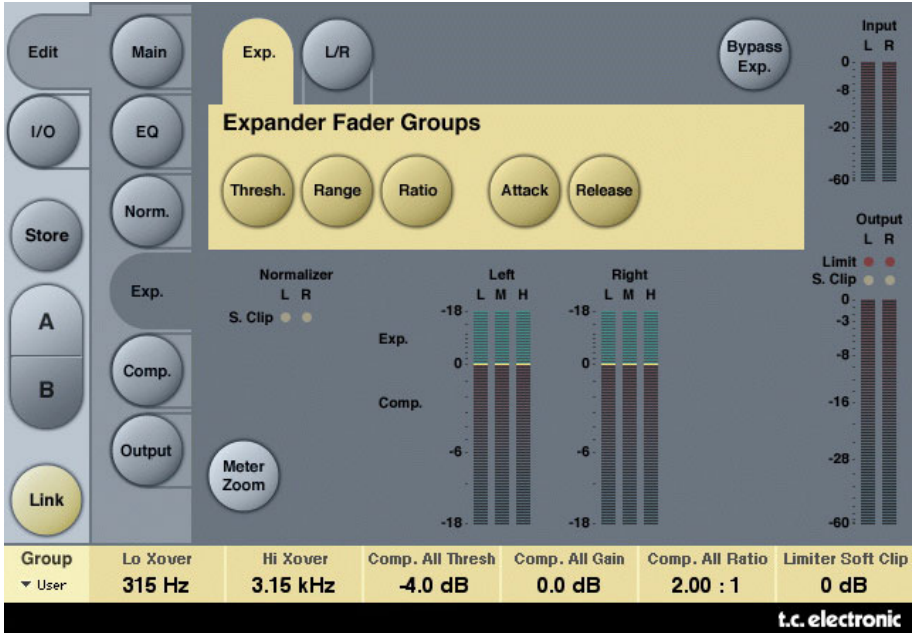

Pressing Threshold, Range, Ratio, Attack and Release keys will immediately assign Lo, Mid, Hi and Master values for these parameters to Faders 1-4. Press the L/R key to see all parameters at the same time.

Threshold parameters

Range: -50dB to 0dB (in 0.5dB steps)

When the signal drops below the set Threshold point the Expander is activated.

Range

Range: -40dB to 0dB in 0.5dB steps

The Range parameter sets the Max attenuation relative to the Ref level setting.

Example: With a Ref Level setting of -6 dB and Range set to -10 the max attenuation can be -16dB.

Ratio parameters

Range: Off to Infinity

The Ratio of the Gain Reduction.

Example: If the signal drops 1 dB below the Threshold with a Ratio set to 1:3 the actual attenuation will be 3dB.

Attack

Range: 0.3 to 100ms (Exponential)

The Attack time is the time the Expander uses to release its gain reduction when the Input signal rises above the set Threshold point.

Release

Range: 20ms to 7sec. (Exponential)

The Release time is the time the Expander uses to achieve the attenuation specified by the Ratio parameter when the signal drops below the set Threshold point.

Meter Zoom

Press to zoom on the range of the Gain Reduction meters.

L/R

Press to view all algorithm parameters at the same time.

Compressor Page

Group	Lo Xover	Hi Xover	Comp. All Thresh	Comp. All Gain	Comp. All Ratio	Limiter Soft Clip
▼ User	315 Hz	3.15 kHz	-4.0 dB	0.0 dB	2.00 : 1	0 dB

Pressing Threshold, Gain, Ratio, Attack and Release keys will immediately assign Lo, Mid, Hi and Master values for these parameters to Faders 1-4. Press the L/R key to see all parameters at the same time.

Threshold

Range: -25dB to 20dB (in 0.5dB steps)
Relates to the Ref.Level setting.

General explanation - when the Input signal exceeds the Threshold value the Compressor starts to reduce the dynamic content of the signal according to the set Ratio.

Gain

Range: Off, -18dB to 12dB in 0.5dB steps.
Manual Makeup-gain for each compression band.

Where the Auto Gain control in the Main page compensates for the total gain reduction caused by the Compressor, the Gain controls in the Compressor pages are used as additional gain controls on the individual bands.

Ratio

Range: Off to Infinity

Specifies the Ratio of the performed compression.

Example: With a Ratio setting of 2:1 the compressor will reduce every 2dB above the Threshold point to only 1dB.

Attack

Range: 0.3 to 100ms

The Attack time is the time the Compressor uses to reach the gain reduction specified by the Ratio parameter.

Example: If the Input signal increases by 4dB above the set Threshold with a Ratio set to 2:1 and the Attack time set to 20ms, the Compressor will use 20ms to reach a Gain reduction of 2dB.

Release

Range: 20ms to 7s

The fallback time. The time it takes for the Compressor to release the attenuation of the signal.

Meter Zoom

Press to zoom on the range of the Gain Reduction meters.

L/R

Press to view all algorithm parameters at the same time.

Output page

Group	Lo Xover	Hi Xover	Comp. All Thresh	Comp. All Gain	Comp. All Ratio	Limiter Soft Clip
▼ User	315 Hz	3.15 kHz	-4.0 dB	0.0 dB	2.00 : 1	0 dB

FULL RANGE LIMITER

Soft clip

Range: -6dB to 0 dB in 1-dB-steps; +3dB; off.

Soft clipper after the Compressor.

Threshold is relative to 0dBFS - not to the Ref Level.

Threshold

Threshold is relative to 0dBFS - not to the Ref Level.

Range: -12 to +3 dB

-6 to + 3 in 0.1dB increments

-12 to -6 in 0.5dB increments

Release

Range: 20ms to 7sec

Release time for the Limiter.

Ceiling

Range: 0 to -0,10dB in 0.01dB steps.

Fine-tuning parameter setting the Ceiling for the Limiter.

This parameter prevents the Output signal from ever exceeding the adjusted Threshold. It can be used to "hide" overloads to downstream equipment, but it does not remove the distortion associated with an over.

TRIM LEVELS

Trim L

Range: 0 to -12dB in 0.1dB steps

Left channel Output level trim after the Compressor and Output mode parameter (M/S) and before the Limiter section.

Trim R

Range: 0 to -12dB in 0.1dB steps

Right channel Output level trim after the Compressor and Output mode parameter (M/S) and before the Limiter section.

OUTPUT FADER

Output Level

Range: Off to 0dB (<-40dB: in 3dB steps, >-40 in 0.5dB steps)

Output fader for both Outputs.

Balance

Range: -6dB to -6dB

Changes the Output balance between the Left and Right channel.

Compare key

Due to the difference in level, "in-circuit" and "out-of-circuit" comparisons are often difficult to make using the BYPASS key. Use the Compare Level parameter to compensate. Press to activate compare function.

Compare Level

Range: -20 to 0dB


Processing with MD3 will most often also mean raising the level of the signal.

To make a realistic comparison of processed and unprocessed signal it is important to compare at equal levels. Use the Compare level to set a level for the processed signal.

Bypass Lim.

Press to bypass the Limiter section.

BRICKWALL LIMITER

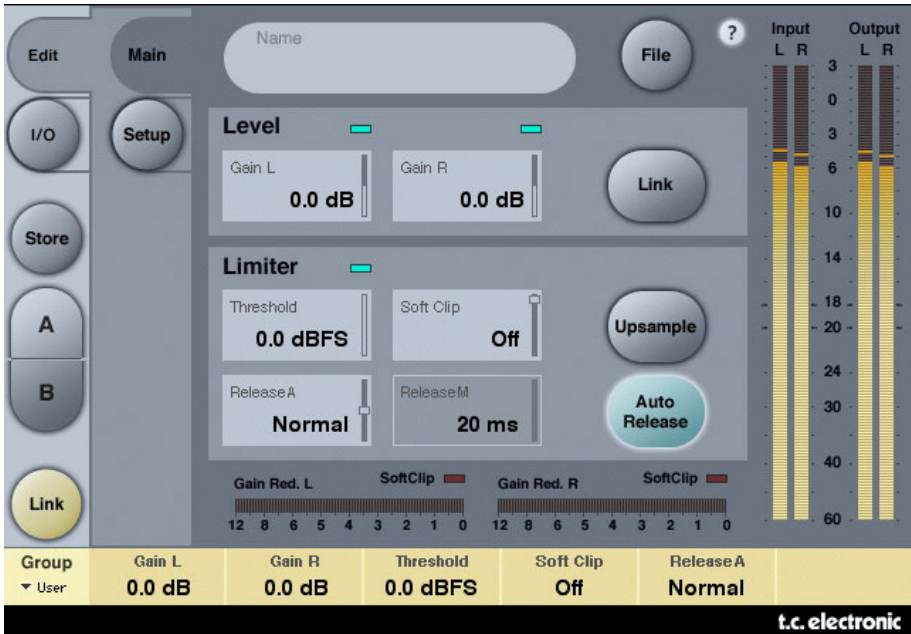

GETTING STARTED

The BrickWall limiter cannot prevent destruction of dynamic range from happening at earlier stages in the production process, but it can get rid of the signals we know are going to get distorted in consumer CD players, radio processors or data reduction codecs.

Precision in Level and Time

The BrickWall limiter operates with extended precision in both level (48 bit throughput) and time (5 times oversampling). Double precision calculations are always used, while hyper-precision in limiter timing can be turned on or off using the Upsample key.

Level meters are always upsampled in order to identify intersample and 0dBFS+ peaks on Inputs as well as Outputs. The meter scale is extended to +3dBFS because excessive level normally falls between 0 and +3dBFS, and most consumer equipment already exhibits severe distortion at +0.5 dBFS.

We recommend using the BrickWall limiter in Upsample mode. However, if you wish to just limit the signal based on sample by sample values like a normal digital limiter, the function can be turned off. When turned off the limiter does not protect against 0dBFS+ peaks from occurring.

Limiter Time constants

The Limiter employs adaptive time constants to combat distortion at low frequencies while maintaining quick adoption to occasional peaks.

A manual Release time can be set if the Auto Release key is turned off. We recommend using the Auto setting with Release set at Default. If quick recovery and loudness is an issue, move the Release setting in the Fast direction.

Processing of very sensitive material might sound better with Release settings in the Slow direction.

Absolute Bit Transparency

Whenever the BrickWall limiter is not attenuating the signal, it is passed completely unaffected, transparent to the 24th bit. Consequently, the BrickWall limiter may be used to remove 0dBFS+ peaks on already mastered and finally dithered material.

When the Limiter is bit transparent, a green indicator next to the Threshold control lights up.

Input and Output gain controls have 0.1dB increments, but snap to bit shifts at 0, 6, 12, 18 and 24dB settings. When a bit shift value is selected, a green indicator is lit on the screen. Bit transparency from Input to Output is obtained when Input Gain and Output Fader hit these values and sum to 0dB, e.g. Input/Output 0/0dB, -6/+6 dB, -12/+12dB etc.

Bit Pattern Transparency

When only bit shift gain settings are used on Input and Output, bit patterns remain unchanged through the algorithm, but can be shifted up (in the MSB direction) or down (in the LSB direction) as desired. E.g. Input/Output +6/0 (one up), 0/-12 (two down).

Linking

The two channels BrickWall limiters can be operated independently or linked. If pronounced limiting is performed on stereo material, linking should be considered to avoid L/R image shifts. If only mild and occasional limiting is being done, un-linked operation even on stereo material may sound the best.

Preset Management

TC's comprehensive file based preset architecture makes archiving presets a simple process. This allows you to organize your presets the way you find most comfortable for your workflow, and to exchange presets with other users, no matter the platform or application. Presets are saved as discrete files on your hard drive. Once a preset is saved into the default location, it will automatically appear in the 'File' menu every time you use the plug-in. The files can then be organized into sub-folders, where you can delete, rearrange or create your own sub-folders to accommodate your needs.

NOTE: A folder will appear in the Preset File Menu if it contains at least one preset.

NEXT/PREVIOUS PRESETS

From the plug-in's Main page, you can directly jump from one preset to the next (or previous) by clicking on the UP/DOWN arrows to the right of the preset name.



All presets available at the default plug-in preset location will be considered, so you could in theory reach every preset this way. Direct access to specific presets is done via the "File" button:

PRESET FILE MENU

Pressing the 'File' button will open the plug-in's File menu. The following options are available from the File menu.

Loading a Preset

By selecting 'Load', you can navigate to any folder on the system that you have read access to, including any shared folder. By default, these will be loaded from the default location for MD3 presets. Only presets located in the default file location will appear in the MD3 pop-up preset menu.

Naming a Preset

- Double click on the name field
- Type in the new name
- Press Enter

Saving a Preset

By selecting 'Save', you can save your preset to any folder on the system that you have write access to, including any shared folder. By default, presets are saved to the default location for the MD3 presets.

DEFAULT PRESET LOCATIONS

The following locations will describe where you can find the MD3 presets. The presets are stored in a folder that is unique to each plug-in:

The plug-in's own preset handling is storing the presets in the following locations:

Mac OS

Factory Presets:

/Library/Application Support/TC Electronic/MD3/Presets/

/Library/Application Support/TC Electronic/BrickWall Limiter/Presets/

User Presets:

~/Library/Application Support/TC Electronic/MD3/Presets/

~/Library/Application Support/TC Electronic/BrickWall Limiter/Presets/

Windows

Factory Presets:

{System Drive}/Program Files/TC Electronic/MD3/Presets/

{System Drive}/Program Files/TC Electronic/BrickWall Limiter/Presets/

User Presets:

My Documents/TC Electronic/MD3/Presets/

My Documents/TC Electronic/BrickWall Limiter/Presets/

- To delete a file, simply move it to the 'Trash' or 'Recycle bin'.
- To create a new sub-folder that appears in the plug-in menu, simply create a new folder in the plug-in folder that resides in the PRESETS folder of the MD3/BrickWall default preset location.

NOTE: A folder will not appear in the Preset File Menu unless it has at least one preset inside.

CONVERTING MD3 PRESETS FROM SYSTEM 6000

In case you are the happy owner of the MD3 algorithm for System 6000, here is something to get you in an even better mood: The MD3 plug-in is able to read your System 6000 presets.

In order to convert presets from System 6000 to MD3, you need to store the System 6000 presets in a preset file. The file extension has to be either ".syx" (for example: MyPresets.syx) or .mid for a MIDI file.


The easiest way to export System 6000 presets is to use the "export to file" function from the Icon Editor for Mac/Windows (requires version 3.5 or higher). Alternatively, you can save a bank to a floppy disk (System 6000 only) or do a SysEx-Dump to a MIDI file in your sequencer.

NOTE: For details regarding the export of presets from System 6000, please refer to your System 6000 and Icon Editor documentation.

The generated SysEx/MIDI preset file needs to be placed in the default MD3 Preset folder (at the root level; sub-folders are not considered). The file needs to have either the extension ".syx" (for example: MyPresets.syx) or .mid for a MIDI file.

Note: In case you are running the Icon Editor on the same computer as the MD3 plugin, the MD3 will automatically search for preset files in the default locations for and System 6000 files. You do not need to copy the files!

Once your preset file has been placed in the default MD3 Preset folder, it will show up the next time you click the "File" button. At the top of the pop-up list you'll find a section called "Convert", and the name of your preset file will be listed here.

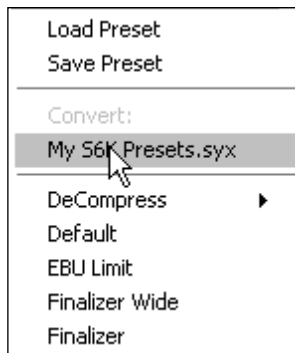

To convert your preset file to MD3 presets, simply select the name of the preset file. The conversion will only take a few seconds and only needs to be done once. When the conversion is done, all presets from your preset file will be available in a sub-folder that has the same name as the preset file had. The presets will show up in the same bank structure as on the System 6000, and presets that are not based on the MD3 algorithm will not be converted.

The preset file will disappear from the Convert section of the file menu.

COMPARE SETTINGS WITH A/B MEM FUNCTION

With the A/B compare function you can easily compare different parameter settings when you work with your music.

You have two buttons: the "Mem" and the "A/B" button.



When you start working with your preset, the A/B button is grayed out. This state indicates that the settings in both memory locations A and B are identical - so there is actually nothing to compare.

As soon as you touch one of the parameters, the memory location "A" will get active, and the "A"-part of the A/B button will light up. All parameter changes will be applied to memory location "A". If you switch to memory location "B", you get back to your starting point, and all further changes will now be applied to memory location "B". Every time you press the A/B button, you will toggle between these two memory locations.

NOTE: The A/B memory locations are temporary settings only! Saving a preset (e.g. via the File button or with your session) will only save the currently selected memory location. The setting of the other (hidden) memory location will not be saved!

The "Mem" button will reset the A/B memory locations to the current setting.

PARAMETER LOCK AT PRESET RECALL

The parameter lock function allows you to lock the Dry Level, In Level and Out Level, from changing when you change preset.

By using the parameter lock, you can easily browse through the extensive set of presets that comes with the MD3, without having to change the Dry Level, In Level or Out Level all the time.

To lock a parameter, simply click on the small lock in the parameter field. To unlock it, click again.

The parameter lock only affects parameter changes made with the mouse. The parameter lock does not affect automation data or preset changes initiated from the host application. These changes will always pass.