VoiceOne

7E33800501
Power Button, DR-01113

7E33905111
Small Plastic knob Ø13mm

7E33800402
Big Plastic knob Ø30
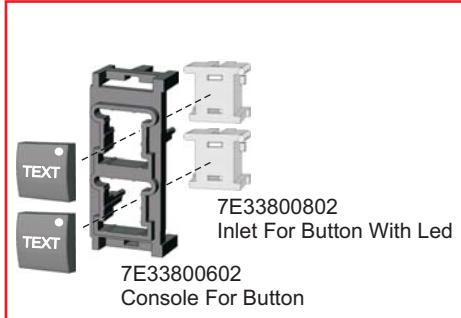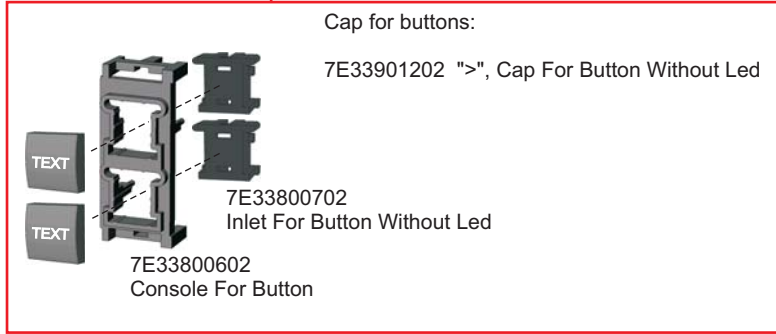
7E58100301
Side Panel

7B80622001
VoiceOne Display

7E58100301
Side Panel

Cap for buttons:

7E33904012 "CORRECT", Cap For Button With Led
7E33904092 "SHIFT", Cap For Button With Led
7E33904002 "INFLECTION", Cap For Button With Led
7E33903902 "VIBRATO", Cap For Button With Led
7E33904082 "SPECTRAL", Cap For Button With Led
7E33904032 "BREATH", Cap For Button With Led
7E33904042 "GROWL", Cap For Button With Led
7E33904052 "RESONANCE", Cap For Button With Led
7E33900202 "I/O", Cap For Button With LED
7E33903702 "MIDI/UTIL", Cap For Button With LED
7E33900902 "STORE", Cap For Button With LED
7E33902502 "BYPASS", Cap For Button With LED
7E33901002 "ENTER", Cap For Button With LED
7E33901102 "RECALL", Cap For Button With LED

7E33800802
Inlet For Button With Led

7E33800602
Console For Button

Cap for buttons:

7E33901202 ">", Cap For Button Without Led

7E33800702
Inlet For Button Without Led

7E33800602
Console For Button