




Company	TC-Helicon Vocal Technologies Inc.
Document	VoiceLive Touch 2 Front Test
Version	1.0
Created	November 9, 2012
Created by	RE
Products Supported	VoiceLive Touch 2
Notes	This document outlines the front test process for new VoiceLive Touch 2.


Revisions

Rev.	Description	Date
1.0	Initial Release	Nov. 9, 2012

1. During power up, when the LCD first displays text, hold down the buttons shown in the picture below.

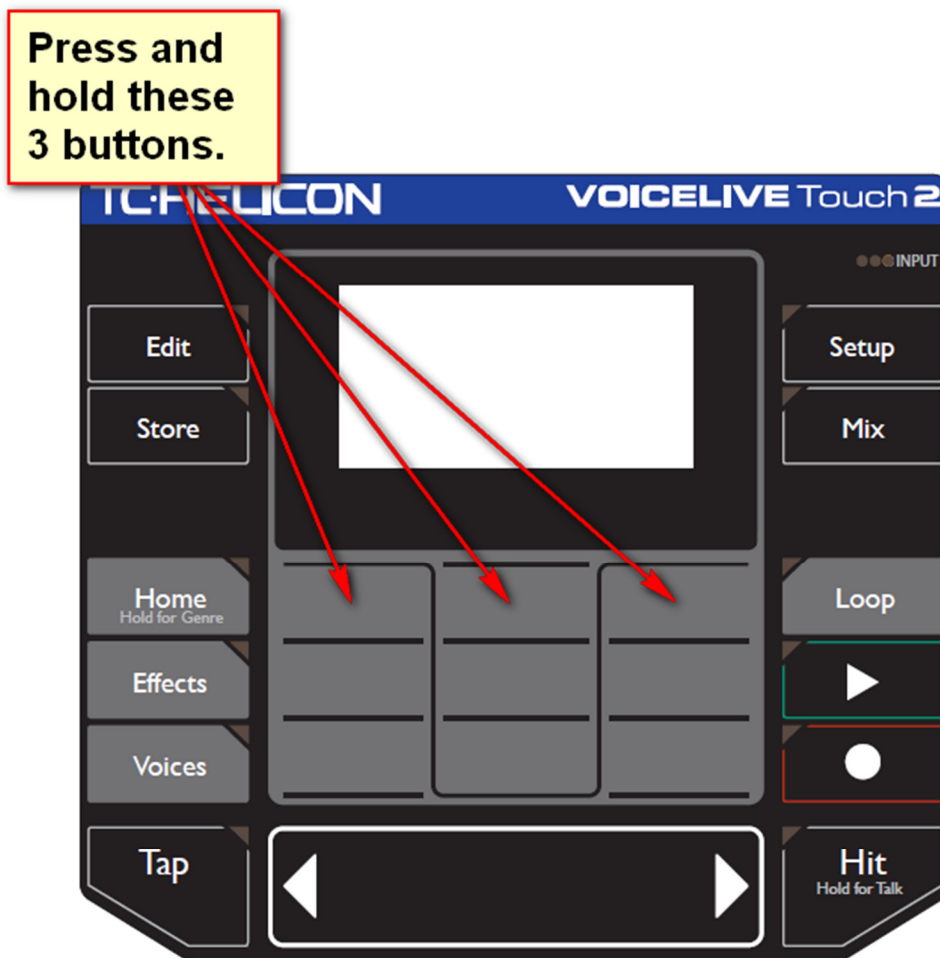

2. After the three above buttons are held down a screen similar to the one below will appear.

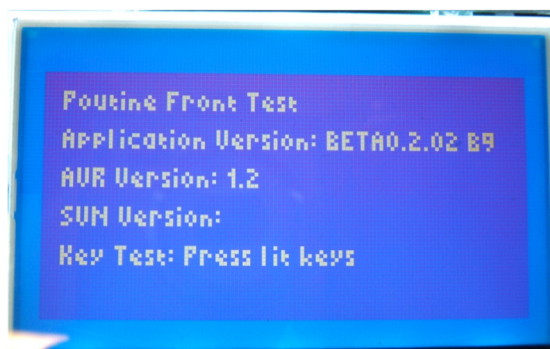


3. Follow the instructions displayed on the LCD. It will instruct you to press each button that has an LED lit. It will start with the top left button, move down the left side, then repeat the same sequence for the right side buttons.
4. Next, the LCD will display which of the buttons below the LCD to press as seen below.



5. You will then be asked to use the slider and slide right, then left.



6. Finally you will be asked to use the Slider until the screen fills and then examine the LCD for any anomalies. See below picture.

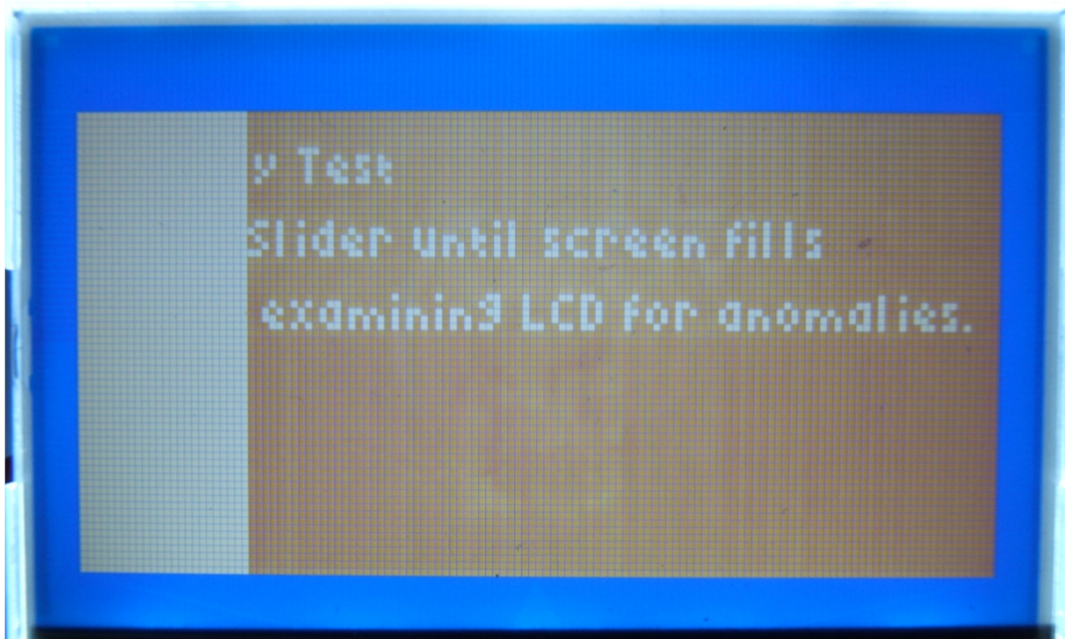

7. The front test is now complete and the following screen will be displayed.
Power cycle the unit.

