Instructions

Here is what is needed

- Rubber mat for workbench surface
- Cloths for wiping down product
- Box cutter for opening boxes
- 5mm bolt
- Magnetic hex bit holder for electric screwdriver
- #2 Philips bit for above
- 7mm nut driver
- Thread lock

Steps:


- 1. Carefully unbox outer and inner cartons by cutting packing tape on bottom of cartons.
- 2. Remove 502 from carton and remove from white protective pouch carefully.
- 3. Remove 12x Philips screws from around the outer edge of back panel.
- 4. Using a 5mm bolt, screw this into one of the existing open holes it will push off the back panel (there is a gasket between the panel and enclosure that makes it 'stick').
- 5. Unplug transformer connector on the power amplifier board (circled in red), and both connectors to the drive units.
- 6. Remove the 2 screws that hold the transformer to the plate (circled in red).
- 7. Fit screening plate (Part no 5470 0402) using these 2 screws for location, using thread lock on the nuts.
- 8. Remount the 3 connectors.
- 9. Carefully insert the amp assembly back into the cabinet and replace screws.
- 10. Power up the product to ensure hum from tweeter is absent- some residual hiss is normal. Test with a signal source, such as MP3 player.
- 11. Wipe the monitor down with a soft cloth to remove any dust/ debris/ fingerprints.
- 12. Re-insert into its white protective pouch and re-apply tape.
- 13. Put monitor back into Styrofoam end-caps ensuring all accessories are included and re-seal inner box.
- 14. Insert inner box into outer sleeve ensuring cutout and serial # line up.

The following photographs are intended for reference. However, if you have any queries on the process, please contact service@tannoy.com

Edited by: FNN 11-11-2014



Unscrew Amplifier Panel

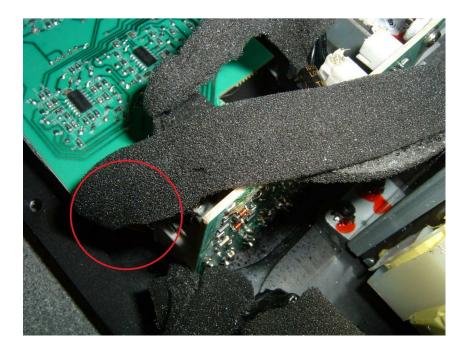

Remove Transformer Connector from PCB

Edited by: FNN 11-11-2014



Remove 2 Bolts using a #2 Philips screwdriver at the back and a 7mm nut driver on the inside.



Mount the bracket and nuts on the 2 exposed bolts as shown.

Edited by: FNN 11-11-2014